USER MANUAL

HV-SERIES

MP 3100 HV G3

Software Version V 1.0

Order No. 9103-0628 EN

License Notice

The Spotify Software is subject to third party licenses found here:
www.spotify.com/connect/third-party-licenses.

Use of the Works with Apple AirPlay badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.
Apple and AirPlay are trademarks of Apple Inc., registered in the U.S. and other countries and regions.

Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries, used with permission. aptX is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries, used with permission.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by T+A elektroakustik is under license. Other trademarks and trade names are those of their respective owners.

HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and “Arc” logos are proprietarytrademarks of iBiquity Digital Corp

This product contains software in form of object code that is partially based on free software under different licenses, especially the GNU General Public License. You can find details on this in the License Information which you should have received with this product.
If you have not received a copy of the GNU General Public License, please see http://www.gnu.org/licenses/.
For a period of three years after last distribution of this product or its firmware, T+A offer the right to any third party to obtain a complete machine-readable copy of the corresponding source code on physical storage medium (DVD-ROM or USB stick) for a charge of 20€. To obtain such copy of the source code, please write to the following address including information about product model and firmware version: T+A elektroakustik, Planckstr. 9-11, 32052 Herford, Germany.
The GPL license and further information about Licenses can be found on the internet under this link:
https://www.ta-hifi.de/support/license-information-g3/

HD Radio Technology available in US-version only!

Welcome.

We are delighted that you have decided to purchase a T+A product. With your new **MP 3100 HV** you have acquired a top-quality piece of equipment which has been designed and developed with the wishes of the audiophile music lover as absolute top priority.

This system represents our very best efforts at designing practical electronic equipment incorporating solid quality, user-friendly operation and a specification and performance which leaves nothing to be desired.

All these factors contribute to a piece of equipment which will satisfy your highest demands and your most searching requirements for a period of many years. All the components we use meet the German and European safety norms and standards which are currently valid. All the materials we use are subject to painstaking quality monitoring.

At all stages of production we avoid the use of substances which are environmentally unsound or potentially hazardous to health, such as chlorine-based cleaning agents and CFCs.

We also aim to avoid the use of plastics in general, and PVC in particular, in the design of our products. Instead we rely upon metals and other non-hazardous materials; metal components are ideal for recycling, and also provide effective electrical screening.

Our robust all-metal cases exclude any possibility of external sources of interference affecting the quality of reproduction. From the opposite point of view our products' electro-magnetic radiation (electro-smog) is reduced to an absolute minimum by the outstandingly effective screening provided by the metal case.

The case of the **MP 3100 HV** is built exclusively from the finest-quality non-magnetic metals of the highest purity. This excludes the possibility of interaction with the audio signals, and guarantees uncoloured reproduction.

We would like to take this opportunity to thank you for the faith you have shown in our company by purchasing this product, and wish you many hours of enjoyment and sheer listening pleasure with your **MP 3100 HV**.

T+A elektroakustik GmbH & Co KG

About these instructions

All the controls and functions of the **MP 3100 HV** which are frequently used are described in the first section of these operating instructions.

The second part **'Basic settings, Installation, Using the system for the first time'** covers connections and settings which are very seldom required; they are generally required only when the machine is set up and used for the first time. Here you will also find a detailed description of the network settings required for connecting the **MP 3100 HV** to your home network.

Symbols used in these instructions



Caution!

Text passages marked with this symbol contain important information which must be observed if the machine is to operate safely and without problems.



This symbol marks text passages which provide supplementary notes and background information; they are intended to help the user understand how to get the best out of the machine.

Notes on software updates

Many features of the **MP 3100 HV** are software based. Updates and new features will be made available from time to time. The update process takes only a few minutes. See the chapter entitled “Software update” for how to update your device via the internet connection.

We recommend you to check for updates before using your **MP 3100 HV** for the first time. To keep your device up to date you should check for updates from time to time.

IMPORTANT! CAUTION!

This product contains a class 1 laser diode. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product.
Refer all servicing to qualified personnel.

The following caution labels appear on your device:
Rear Panel:





The operation instructions, the connection guidance and the safety notes are for your own good - please read them carefully and observe them at all times. The operating instructions are an integral part of this device. If you ever transfer the product to a new owner please be sure to pass them on to the purchaser to guard against incorrect operation and possible hazards.

CE

All the components we use meet the German and European safety norms and standards which are currently valid. This product complies with the EU directives. The declaration of conformity can be downloaded from **www.ta-hifi.com/DoC**.

Contents

Introduction **8**
- PCM and DSD 8
- MP 3100 HV and DSD 8
- MP 3100 HV and PCM 9

Front panel controls **10**

Remote control **14**

Basic settings of the MP 3100 HV **16**
- Calling up and operating the menu 16
- Source settings 17
- Display Brightness 17
- Display Mode 17
- Language 17
- Device name 17
- Energy Saver 18
- Network 18
- Device Info 18

D/A Converter Settings **19**
- Calling up and operating the menu 19
- D/A mode 19
- Output 19
- Bandwidth 19

Operation with the F3100 in an integrated system **20**

Operating the source devices in detail **20**
- Operation with the F3100 remote control 20
- Operation with controls on the front panel of the device 20

Preset lists **21**
- General information 21
- Calling up the Preset list 21
- Adding a Preset 21
- Erasing a Preset from the Preset list 21
- Selecting a Preset from the list 22
- Directly selecting a Preset 22
- Sorting Preset lists 22

Operating the radio **23**

FM – Radio **23**
- Selecting FM radio 23
- Manual station search 23
- Searching for an HD Radio station 24
- Automatic station search 24
- Selecting a station from the Station list 24
- RDS functions 25
- Switching Radio Text on and off 25
- Mono / Stereo 25

DAB - Radio **25**
- Selecting DAB radio 25
- Automatic station search 26
- Selecting a station from the Station list 26
- RDS functions 26

Internet radio **27**
- Selecting Internet Radio as source 27
- Selecting podcasts 27

Playback ... 27
Favourites list ... 27
Search function ... 28

Operating music services ... 29
General information ... 29
Selecting a music service ... 29
Playlists and favourites ... 31
General information on the streaming client ... 32
Selecting the UPnP / DLNA source ... 32
Streaming Services of the Streaming Client ... 32
Playback ... 32

Operating the UPnP / DLNA source ... 32
Playback of directories ... 33
Search function ... 33

Playing USB memory media ... 34
General information ... 34
Selecting USB Media as source ... 34
Playback ... 34
Playback of directories ... 35

Operating the DISC player ... 36
Selecting the disc player as source ... 36
Inserting a CD ... 36
Playing a CD ... 37
Variations ... 37
Track Select During playback ... 37
Playback mode ... 37
Fast Search ... 37
Special features with Super Audio CD (SACD) ... 38
General information ... 38
Setting the preferred layer ... 38
Screen display ... 38
Playback Program ... 39
Creating a Playback Program ... 39
Playing a playback program ... 39
Erasing a playback program ... 39

Operating the Bluetooth source ... 40
Connecting the aerial ... 40
Selecting the Bluetooth Audio source ... 40
Setting up audio transfer ... 40
Playback functions ... 40
Controlling the MP 3100 HV ... 41
NOTES ... 41

The MP 3100 HV as D/A Converter ... 42
General Information on ... 42
D/A Converter Operation ... 42
D/A Converter Operation ... 42
Selecting a D/A Converter Source ... 42
Screen Display ... 42
USB DAC operation in detail ... 43
System-requirements ... 43
Installing drivers ... 43
Settings ... 43
Notes on software ... 43
Notes on operation ... 43

Notes on setting up 43
Playback with roon **44**
General information 44
Playback 44

Installation Using the system for the first time Safety notes 45

Back panel connections **46**

Installation and wiring **48**

Safety notes **50**

Network Configuration **52**
General Information 52
Compatible hardware and UPnP servers 52
Network settings menu 52
Opening the network settings menu 52
Operating the nenu, changing and storing IP addresses 52
Closing the menu 53
Interrupting the menu without storing the settings 53
The Configuration for a Wired Ethernet LAN or Power-Line LAN connection **54**
Setting the Parameters for a Wired Network 54
The Configuration for a WLAN connection **55**

Notes on Energy Saving **56**

Legal Information **56**

Firmware update **57**

Technical description Digital filters / Oversampling **58**

Network Terminology **60**

Trouble shooting **62**

Appendix A **65**
Wiring diagram symmetric (XLR) 65
Wiring diagram unsymmetric (Cinch / RCA) 66
Wiring diagram Bluetooth / WLAN 67
Wiring diagram antenna connection 68

Appendix B **69**
Specification **69**

Introduction

PCM and DSD

Two competing formats are available in the form of PCM and DSD, both of which are used to store audio signals at very high resolution and quality. Each of these formats has its own specific advantages. A vast amount has been written about the relative merits of these two formats, and we have no intention of participating in the dispute, much of which is less than objective in nature. Instead we consider it our task to develop equipment which reproduces both formats as effectively as possible, and exploits the strengths of each system to the full.

Our many years of experience with both systems have clearly shown that PCM and DSD cannot just be lumped together; it is essential to treat each format separately, and take their specific requirements into account. This applies both at the digital and analogue level.

For this reason the **MP 3100 HV** employs two separate digital sections, two D/A converter sections and two analogue back-ends - each optimised for one format.

MP 3100 HV and DSD

By its nature the DSD format involves a noise floor which rises above the range of human hearing as frequency rises. Although this noise floor is not directly audible, it does subject the treble units in the loudspeakers to a significant load. It is also possible for the high-frequency noise to cause distortion in many low-bandwidth amplifiers.
The lower the DSD sampling rate, the more severe the inherent noise, and it cannot be disregarded, especially with the DSD64 format - as used on the SACD. As the DSD sampling rate rises, the high-frequency noise becomes increasingly insignificant, and with DSD256 and DSD512 it is virtually irrelevant. In the past it has been standard practice to apply digital and analogue filtering processes in an attempt to reduce DSD noise, but such solutions are never entirely without side-effects on sound quality. For the **MP 3100 HV** we have developed two special techniques designed to eliminate the sonic disadvantages:

1.) The **T+A** True-DSD technique, consisting of a direct digital signal path without filtering and noise-shaping, plus our True 1-bit DSD D/A converter
2.) Analogue reconstruction filter with selectable bandwidth

The **T+A** True-DSD technique is available for DSD sampling rates from DSD64 upwards.

High-resolution music, recorded natively in DSD format, is available e.g. from Native DSD Music at **www.nativedsd.com** . A free test sampler is also available for download there*.

nativeDSD MUSIC


* Status 05/19. Changes possible.

MP 3100 HV and PCM

The PCM process makes extremely high-resolution sampling values available: up to 32 bits. However, the sampling rate of PCM is significantly lower than that of DSD, and the spacing in terms of time between the sampling values is greater.
This means that it is extremely important with PCM to employ maximum possible precision when converting the high resolution into analogue signals. Here at **T+A** our answer was to develop quadruple D/A converters which provide a four-fold improvement in accuracy over conventional converters. A further very important aspect of PCM reproduction is to reconstruct the curve of the original analogue signal between the sampling points with great accuracy, since these points are much more widely spaced in comparison with DSD. To this end the **MP 3100 HV** employs a polynomial interpolation process (Bezier-Spline interpolation) developed in-house at **T+A**, which in mathematical terms delivers the smoothest curve for a given number of reference points (sampling points). The output signal generated by Bezier interpolation exhibits a very "natural" shape, devoid of the digital artefacts - such as pre- and post-oscillation - which are usually produced by the standard oversampling process. More detailed information on this can be found in the chapter **"Technical description, oversampling / up-sampling"**

And one final comment: If you intend to carry out your own tests to decide whether DSD or PCM is the superior format, please be sure to compare recordings with comparable information density – i.e. DSD64 with PCM96/24, DSD128 with PCM 192 and DSD256 with PCM384!

Front panel controls

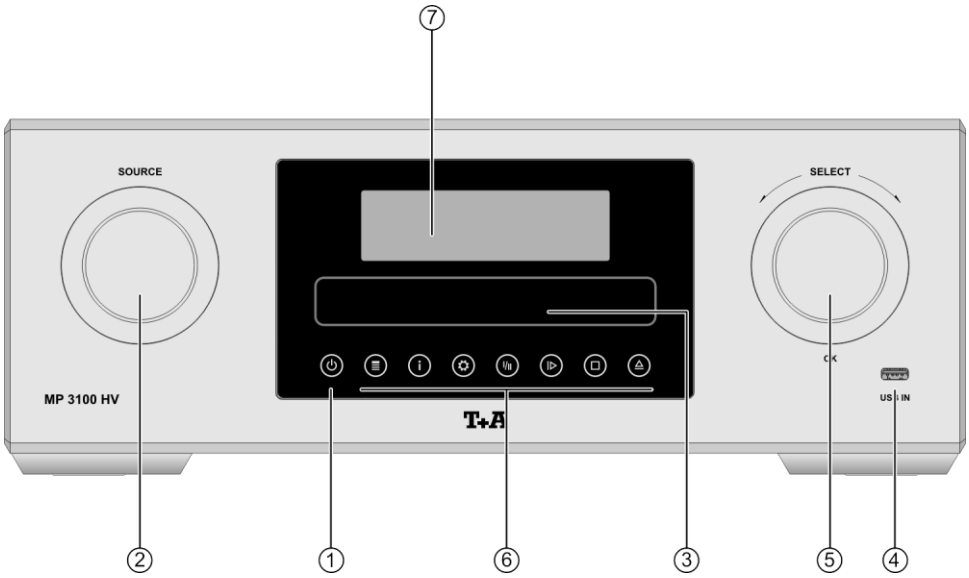

All the important functions of the **MP 3100 HV** can be controlled using the buttons and rotary knobs on the front panel. The large rotary knobs are used for navigation in lists and menus and to select the listening source. Functions which are needed less frequently are controlled using a menu which is called up by pressing the ⊛ button.

All information relating to the machine's state, the current track and the associated transmitting station are displayed on the integral screen. The following section explains the functions of the buttons on the machine, and the information provided on the screen.

① On / Off switch

Touching the ⏻ button briefly switches the device on and off.

The ⏻ button remains dimly lit even in stand-by mode, to indicate that the **MP 3100 HV** is ready for use.

Caution!
The ⏻-button is not an isolation switch. Certain parts of the machine remain connected to mains voltage even when the screen is switched off and dark. To disconnect the device completely from mains power supply, the mains plugs must be withdrawn from the wall sockets.
If you know you will not be using the machine for a long period, we recommend that you disconnect it from the mains

② Source selection

SOURCE

The desired listening source is selected by turning this rotary knob; your chosen source then appears on the screen. After a short delay the machine switches to the appropriate source.

③ CD drawer

The CD drawer is located below the display. Please insert the disc with the label side facing upwards into the appropriate depression of the tray.

The drawer is opened and closed by touching the ⏏ button or by a long press on the source selection knob (**SOURCE**).

④ Front USB socket (USB IN)

Socket for a USB memory stick or an external hard disc.

The storage medium can be formatted with the FAT16, FAT32, NTFS, ext2, ext3 or ext4 file system.

The USB storage medium can be powered via the USB socket provided that its current drain meets the USB norm (< 500 mA). Normalised 2.5" USB hard discs can be connected directly to this socket, i.e. they require no mains PSU.

⑤ Navigation / Control

SELECT

Rotating this control selects a track for playback; the selected track then appears on the screen. As soon as the desired track number lights up, the track can be started by pressing the incremental control.

In addition to selecting tracks, the SELECT-knob also has other purposes such as menu and list control functions (for further details see the chapter entitled **'Basic settings of the MP 3100 HV'**) and creating playback programs.

⑥ Operating buttons

Calls up the Favourites list

Brief touch: Switches the display view from list navigation to the current played music track. /
switches the CD- / Radio - Text on and off.

Long touch: Switches between different screen displays

Opens the **'System Configuration'** menu
(for further details see the chapter entitled **'Basic settings of the MP 3100 HV'**)

FM Radio:
Button for switching between **Stereo** and **Mono reception.**
The **Stereo** setting is constantly displayed in the screen window by a symbol.
The **Mono** setting is constantly displayed in the screen window by a ● symbol.

DISC:

Selects the preferred layer for SACD playback (SACD or CD). To change the setting, press the button twice if necessary.

Starts playback
Halts current playback (pause)
Resumes playback after a pause

Ends playback


The drawer is opened and closed by touching the ⏏ button.

We do not recommend that you close the disc drawer by pushing it manually. The drawer is opened and closed using the ⏏ button; alternatively a long press on the **SOURCE** button (②) accomplishes the same result.

⑦ Display

The graphic screen of the **MP 3100 HV** displays all information regarding the status of the machine, the music track currently being played and the radio station currently tuned. The display is context-sensitive and varies according to the capabilities and facilities of the service or medium to which you are currently listening.

The most important information is highlighted on the screen in a context-sensitive manner. Supplementary information is displayed above and below the main text, or by means of symbols. The symbols used are listed and explained in the table below.

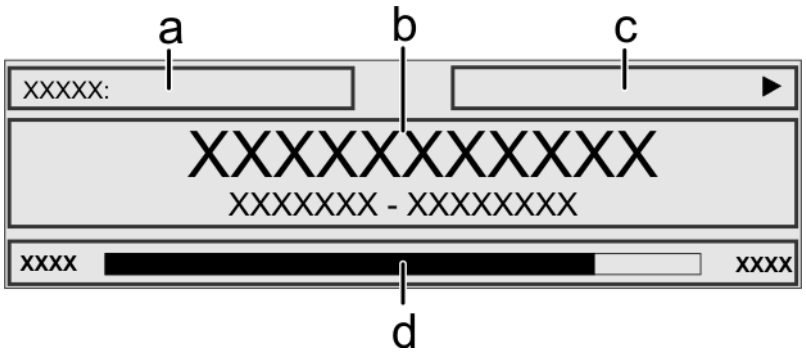

e.g.



The displays and symbols which appear on the screen vary according to the currently active function (SCL, Disc, etc.) and the type of music currently being played.

The basic areas of the screen:

- Display field (a) shows the currently active source.
- Display field (b) shows information relating to the piece of music being played. The essential information is displayed enlarged in the main line.
- Display field (c) shows information relating to the device and playback.
- The bottom line (d) displays supplementary context-sensitive information (e.g. bitrate, elapsed time, state of reception)

The **MP 3100 HV** provides different screen displays for the different sources e.g. the CD player and the radio.

- **Large-format display:**
  Enlarged display of the most important information, clearly legible even from a distance
- **Detail display:**
  Small-text display showing a large number of additional information points, e.g. bit-rate etc.
  A long press on the ⓘ button on the remote control handset or the ⓘ button on the front panel is used to switch between the display modes.


Screen symbols and their meaning

	Making connection (Wait / Busy) The rotating symbol indicates that the **MP 3100 HV** is currently processing a command, or is attempting to connect to a service. These processes may take some time to complete depending on the speed of your network and the load upon it. During such periods the **MP 3100 HV** may be muted, and may not respond to the controls. Please wait until the symbol disappears, then try again.
	Indicates a **music track** which **can be played**, or a **playlist.**
	Indicates a **folder** which conceals further folders or lists.
	Indicates that a source is being reproduced via a **cable connection**.
	Indicates that a source is being reproduced via a **radio connection**.
▶	Indicates that the **MP 3100 HV** is reproducing a station or playing back a music track.
II	Pause indicator
128 k	Buffer display (fullness indicator, memory display) and data rate indicator (if available): The higher the data rate, the better the quality of reproduction.
1:20	Display of the elapsed playback time. This information is not available for all services.
←	Indicates that the ◀ button can be used to switch to a higher menu or select level.
0 / 0	Position indicator in select lists. The first number shows the current position in the list, the second number the total number of list entries (length of list).
↵	Indicates that the selected menu item or list point can be activated by pressing the ▶ button.
ABC or **123** or **abc**	Display of the symbol input modes
	Indicates the field strength of the radio signal.
	If the symbol appears while playing back from a digital input - the **MP 3100 HV** has switched over to its internal precision oscillator (local oscillator). This eliminates jitter effects, but is only possible if the clock quality of the connected signal is adequate.

Remote control

Introduction

The following table shows the remote control buttons and their function when operating the machine.

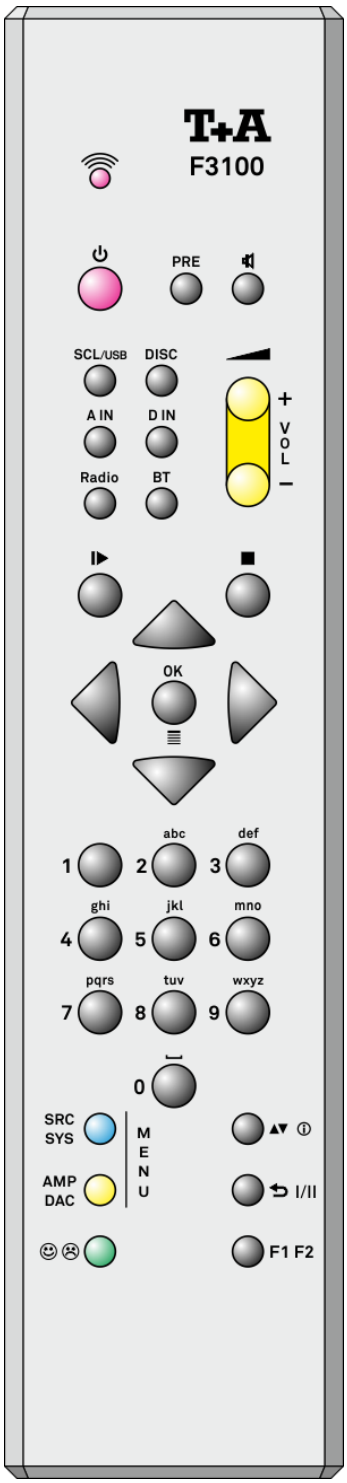

⏻	Switches the device on and off
SCL / USB	Selects the **SCL** function (e.g. access to music servers, streaming services or similar) or the USB DAC function (playback from a connected computer), or selects the **USB** Media function (connected USB memory media) of the streaming client. **Press this button repeatedly until the desired source appears on the screen.**
DISC	Selects the source CD / SACD for playback.
	If a P/PA 3x00 HV is connected, you can select one of the analog inputs of the P/PA for playback by pressing this button. **Press this button repeatedly until the desired source appears on the P/PA's screen.**
A IN	If a P/PA 3x00 HV is connected, one of the analog inputs of the P/PA can be selected for playback by possibly tapping this button multiple times. **Tap this button until the desired input is displayed on the P/PA 3x00 HV screen.**
D IN	A brief press on this button selects the digital input you wish to use. **Press the button repeatedly until the desired input is displayed on the screen.**
RADIO	Selects **FM**, **DAB**, or **Internet radio,** or **Podcasts** as source. **Press this button repeatedly until the desired source appears on the screen**.
BT	Selects **Bluetooth** as source**.**
1 2 abc ... 9 xyz 0	Direct alpha-numeric input, e.g. track number, fast station select, radio station. The 0 and 1 buttons are also used for non-standard characters. During text input you can switch between numeric and alpha-numeric input, and between capitals and lower case by pressing the ▲▼ button.
🔇	Switches the speaker output of a connected HV-series device on and off.
PRE	Switches the output of a connected P 3x00 HV on and off.
- 🔊 +	Controls the volume setting of a device connected via H-Link.
SRC / SYS	**Brief press:** – Opens the **Source menu** (not available for all sources) **Long press:** – Opens the "**System configuration menu**" (see the chapter entitled '**Basic settings of the SD 3100 HV'**)
AMP/DAC	**Only available if a P/PA 3x00 HV is connected!** **Brief press:** Opens the "**System configuration menu**" of a connected P/PA. **Long press:** Opens the menu for tone settings.


◀	**Brief press** Returns to the previous point / change button **Long press** Fast rewind: searches for a particular passage. Tuner: Search
▶	**Brief press** Confirms the input / change button **Long press** Fast forward: searches for a particular passage. Tuner: Search
▼	Selects the next point within a list / select button Selects the next track / station during playback.
▲	Selects the previous point within a list / select button Selects the previous track / station during playback.
OK	**Brief press** Confirmation button during input procedures **Long press** Displays the Favourites list created on the **MP 3100 HV**
▮▶	Starts playback (Play function) During playback: halts (Pause) or resumes playback
■	Stops playback. **During menu navigation**: A brief press takes you back (higher) by one menu level or aborts the current input process; the change is then abandoned.
▲▼ ⓘ	**Brief press** Switches between capitals and lower case, and numeric / letters, when entering data. **Long press** Cycles through the various screen displays. Detailed display with / without CD text / Radiotext (if present) and large display with / without CD text / Radiotext (if present).
⮌ I/II	**Brief press** When necessary, repeated presses of the button cycle through the various playback modes (repeat track, repeat all, etc.). **Long press** Switches between Stereo and Mono reception (only FM Radio)
☺☹	**Brief press** Adds a favourite to the Favourites list. **System configuration menu**: enables a source **Long press** Removes a favourite from the Favourites list. **System configuration menu**: disables a source
F1 / F2	Opens the D/A mode selection menu. (for details see chapter "**D/A-Converter settings of the MP 3100 HV**")

Basic settings of the MP 3100 HV
System Settings (System Configuration menu)

In the System Configuration menu general device settings are adjusted. This menu is described in detail in the following chapter.

Calling up and operating the menu

- A long press on the SRC / SYS button on the remote control or a brief press the ⚙ button on the front panel calls up the menu.
- When you open the menu, the following Select points appear on the screen:

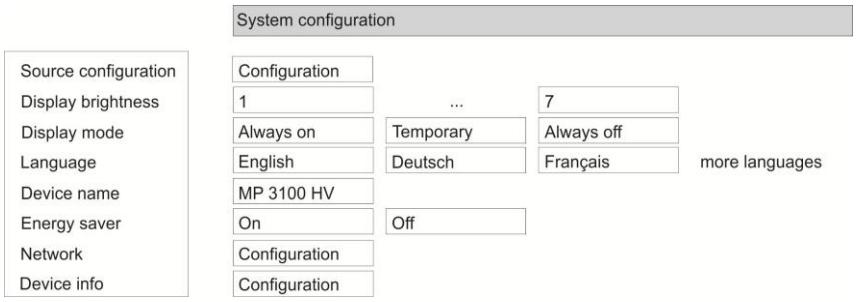

Using the front-panel controls:

- The SELECT knob is used to select any item within the menu system.
- To change a selected menu item, press the SELECT knob to confirm your choice, then adjust the value by rotating the knob.
- After making the adjustment, press the SELECT knob again to adopt the new setting.
- You can interrupt the process at any time by touching the ⚙ button; in this case any changes you have made are discarded.
- Holding the SELECT knob pressed in takes you one level further down in the menu system.
- Touch the ⚙ button again to quit the menu.

Using the remote control handset:

- Use the ▲ / ▼ buttons to select an item in the menu.
- If you wish to change a selected menu item, first press the OK button, and then use the ◀ / ▶ buttons to alter it.
- **After making the change, press the OK button again to accept the new setting.**
- You can press the ■ button at any time to interrupt the process; the change is then abandoned.
- A long press on the SRC / SYS button quits the menu.

Source settings
menu item

At this menu item you can disable sources which are not needed.
Furthermore you can assign a plain text name to each external source (e.g. the digital inputs); this name then appears in the screen displays.
When you call up this menu item using the OK button, a list of all the external sources of the **MP 3100 HV** appears. Each source is followed by the assigned name, or if you have disabled the source concerned the note 'disabled'.
If you want to activate / disable a source, or change the plain text name, navigate to the appropriate line.
To activate a source, briefly press the green button on the F3100; to deactivate it, press and hold the button.
To change the plain-text name, move to the appropriate line and press the OK button. Now use the alpha-numeric keypad of the **F3100** to change the name as required, then confirm your choice with OK; this saves the settings for that source.
The ▲▼ ⓘ button is used to switch between numeric and alpha-numeric input, and between capitals and lower-case letters.
Letters can be erased by pressing the ◀ button.

If you wish to restore the factory default source name, erase the whole name before saving the empty field with the OK button: this action resets the display to the standard source names.

The only available method of entering the name is to use the alpha-numeric keypad on the remote control handset.

Display Brightness
menu item
(screen brightness)

At this point you can adjust the brightness of the integral screen to suit your personal preference for normal use.

We recommend that brightness settings 6 and 7 should only be used when the screen is difficult to read due to very bright ambient light.
A lower brightness setting will extend the useful life of the screen.

Display Mode
menu item

This menu item offers the choice between three different display operation modes:

- Always on
- Temporary
- Always off

Selecting **'Temporary'** will switch the display is on for a short while each time the **MP 3100 HV** is being operated. Shortly after operation the display will be switched off again automatically.

The brightness of the display can be adjusted separately with the menu item **'Display Brightness'** (see above).

Language
menu item

In this menu item you define the language to be used for the displays on the screen of the front panel of the **MP 3100 HV**.

The language used for data transferred to the machine, e.g. from an Internet radio station, is determined by the supplying device or the radio station; you cannot define the language on the **MP 3100 HV**.

Device name
menu item

This menu point can be used to assign an individual name to the **MP 3100 HV**. In a home network the device then appears under this name.
If an amplifier is connected via the **HLink** connection, then the amplifier is able to accept this name automatically, and display it on the screen.

The amplifier only accepts this name if an individual name has not already been assigned at the amplifier itself.

Energy Saver
menu item

The **MP 3100 HV** features two stand-by modes: ECO Standby with reduced stand-by current drain, and Comfort Standby with additional functions, but slightly higher current drain. You can select your preferred stand-by mode in this menu point:

On (ECO standby):

Active functions in ECO standby mode:

- Can be switched on using the **F3100** radio remote control handset.
- Power-on at the device itself.
  Automatic power-down after ninety minutes without signal (only possible with certain sources).

Off (Comfort standby):

The following expanded functions are available:

- Unit can be switched on using the app.
- The automatic power-down function is disabled in Comfort standby mode.

Network
menu item

All network settings can be carried out at this menu point. For a detailed description on setting up a LAN or WLAN connection please also refer to the section entitled "**Network configuration**".

Device Info
menu item

At this menu point you will find information on the status of the installed software and the factory reset.

Sub-point
Update

At this point it is possible to initiate a firmware update.

Sub-point
Update package

This point displays the currently installed software package.

Sub-point
Control

Display of the control software version

Sub-point
Client

Display of the Streaming Client software version

Sub-point
Decoder

Display of the Disc drive mechanism software version

Sub-point
DAB / FM

Display of the tuner software version.

Sub-point
Bluetooth

Display of the Bluetooth module software

Sub-point
DIG OUT

The **DIG OUT** option allows you to switch the digital coaxial output on or off for connecting an external recording device.
If the digital output is also required for sources that provide signals >192kHz or DSD (such as Roon, HIGHRESAUDIO, UPnP and USB-Media), this option must be activated. In this case, DSD source material is converted to PCM and PCM material with a sample rate >192 kHz is converted to a suitable sample rate.
If the digital output is deactivated, the internal signal processing is based on the native signals - in this case, no signal is available at the digital output in the above-mentioned cases.

Sub-point
Bluetooth pairings

Calling up and confirming this menu point erases all existing Bluetooth pairings.

Sub-point
Default settings

Calling up and confirming this menu point erases all personal settings, and restores the machine to the state as delivered (factory defaults).

Sub-point
Legal information

Information on accessing the legal information and license notices.



For further information, see the chapter entitled "Legal Information".

D/A Converter Settings

A number of special settings are available for the **MP 3100 HV** D/A converter; they are designed to fine-tune the characteristics of your amplifier to suit your listening preferences.

Calling up and operating the menu

The menu is called up with a brief press on the F1 / F2 button on the remote control handset.

- Use the ▲ / ▼ buttons to select a menu point.
- The value can now be changed using the ◀ / ▶ buttons.
- A second brief press on the F1 / F2 button quits the menu.

ⓘ The following set-up options are available according to what is currently being played.

set-up option
D/A mode

(PCM playback only)

The **MP 3100 HV** can exploit four different filter types offering different tonal characters:

- OVS **long FIR** (1)
  is a classic FIR filter with an extremely linear frequency response.
- OVS **short FIR** (2)
  is a FIR filter with improved peak handling.
- OVS **Bezier / FIR** (3)
  is a Bezier interpolator combined with a IIR filter. This process produces a result very similar to an analogue system.
- OVS **Bezier** (4)
  is a pure Bezier interpolator – offering perfect “timing” and dynamics.

ⓘ Please refer to the Chapter **'Technical description - Digital filters / Oversampling'** for an explanation of the different filter types.

set-up option
Output

With particular instruments or voices the human ear is certainly capable of detecting whether absolute phase is correct or not. However, absolute phase is not always correctly recorded.

In this menu item the phase of the signal can be changed from normal to inverse phase and back.

ⓘ The correction is carried out at the digital level, and has absolutely no adverse effect on sound quality.

set-up option
Bandwidth

In this menu item, the bandwidth of the analogue output filter can be switched between 60 kHz (normal mode) or 120 kHz (**'**WIDE**'** mode).

The ‘WIDE**’** setting allows a more spacious music reproduction.

ⓘ Please refer to the Chapter **'Technical description - Digital filters / Oversampling '** for an explanation of the different filter types.

Operation with the F3100 in an integrated system

MP 3100 HV in a system with the PA 3100 HV

When the **MP 3100 HV** is operated in a system connection via the **HLink** connection with a **PA 3100 HV** and the remote control F3100, the selection of **PA 3100 HV** sources is not done directly through the source selection buttons on the included remote control F3100, but rather by possibly tapping the A IN button multiple times. The source selection buttons on the F3100 remote control are also used within the system connection to select the sources of the **MP 3100 HV**.

For the **PA 3100 HV**, the **MP 3100 HV** is set as a source as soon as the source is changed using the source selection buttons.

Settings on the **MP 3100 HV** can only be made when the **MP 3100 HV** is selected as a source on the **PA 3100 HV**.

Operating the source devices in detail

Operation with the F3100 remote control

The operation of the source devices is described in the following chapters using the **F3100** remote control because only with this remote control all functions of this device can be operated (e.g. adding favourites).

Operation with controls on the front panel of the device

The front panel controls can be used to operate the basic functions of the **MP 3100 HV**.

The **SELECT** knob can be used to navigate through lists and menus or to control the Disc- player in the same way as the cursor and OK buttons of the **F3100** remote.

In Lists

- Choose a list or menu item by turning the **SELECT** knob.
- By pressing the **SELECT** knob you can select an item or start playback of a title or station.
- By pressing the **SELECT** knob for a longer time you can leave a submenu or navigate to the parent menu level (BACK).

Disc Mechanism Control

- Turning the **SELECT** knob lets you select a track on the CD.
- When the desired track number lights up on the display this track can be started by pressing the **SELECT** knob.

Preset lists

General information

The **MP 3100 HV** includes the facility to create Preset lists. The purpose of these lists is to store radio stations and podcasts, so that they can be accessed swiftly.


Each of the sources **FM radio**, **DAB radio**, and **Internetradio** (incl. podcasts) features its own Preset list.

Once stored, the Presets can either be selected from the Preset list, or called up directly by entering the program location number. The option of selecting using the location number is particularly useful when you wish to call up Presets when the screen is not in view (e.g. from an adjacent room) or using a house control system.

Preset lists for the various music services (TIDAL etc.) are not supported.
Instead it is usually possible to add Favourites and Playlists on-line via the provider's account. These can then be called up and played via the **MP 3100 HV**.

Calling up the Preset list

- The first step is to switch to one of the sources listed above.
- Call up the Preset list by a long press on the OK button of the **F3100** or by briefly tapping the ≡ button on the **MP 3100 HV**.

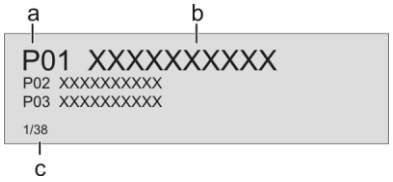

a) Here the program location number is displayed within the list. Since it is possible to erase individual list items, the numbering may not be continuous.

b) The selected list entry is displayed in enlarged form.

c) Position display in the Preset list.

Adding a Preset

If you especially enjoy the piece of music or radio station to which you are currently listening, simply press the green ☺☹ button on the **F3100**; this action stores the station in the corresponding Preset list.

Each Preset lists features 99 program locations.

Preset lists can only be used to store the piece of music and station which is currently playing.

Erasing a Preset from the Preset list

Open the Preset list by a long press on the OK button. Use the ▲ / ▼ buttons to select the station in the list which you wish to erase, then hold the green ☺☹ button pressed; this action removes the item from the Preset list.

Erasing a Preset does not cause the following Preset to move up the list. The station position is no longer displayed after erasure, but a new Preset can still be assigned to it.

Selecting a Preset from the list

- Call up the Preset list by a long press on the OK button of the **F3100** or by briefly tapping the ≡ button on the **MP 3100 HV**.
- Use the ▲ / ▼ buttons to select a stored item from the Preset list. The selected Preset is displayed in enlarged form.
- Select the Preset to be played by pressing the ▶ or OK button.
- You can return to the station to which you are currently listening (quit) by pressing the ◀ button.

Directly selecting a Preset

In addition to the option of selecting Preset using the Preset list, it is possible to access the desired Preset directly by entering the program location number.

To select a stored Preset directly during playback, enter the two-digit program location number of the new Preset using the numeric buttons (0 to 9) on the remote control handset.

After you have pressed the numeric buttons, playback switches to the Preset you have just selected.

Sorting Preset lists

The sequence of items in the Preset list you have created can be altered in any way you wish. This is the procedure for changing the order of the list:

- Call up the Preset list by a long press on the OK button of the **F3100** or by briefly tapping the ≡ button on the **MP 3100 HV**.
- Use the ▲ / ▼ buttons to select the Preset whose position you wish to change. The selected Preset is displayed in enlarged form.
- Pressing the ▲▼ ⓘ button activates the Sort function for the selected favourite. The Preset is highlighted on the screen.



- Now move the activated Preset to your preferred position in the Preset list.
- A further press on the ▲▼ ⓘ button de-activates the Sort function, and the Preset is stored at the new position.
- Close the Preset list by a long press on the OK button of the **F3100** or by briefly tapping the ≡ button on the **MP 3100 HV**.

ⓘ If you have previously erased a number of Presets, you may well find that some program locations in the Preset list are missing (empty). Nevertheless, the Presets can still be moved to any location in the list!

Operating the radio

The **MP 3100 HV** features an **FM Tuner** (VHF radio) with HD Radio™ technology*, a **DAB / DAB+** reception section (digital radio) and also includes the facility to stream **Internet radio**. The following section describes in detail how to operate the individual radio sources.
HD Radio technology enables radio stations to transmit analogue and digital programmes on the same frequency simultaneously.
The integral DAB+ receiving section is backwards-compatible with DAB, to ensure that you have access to a wide range of stations.


*** HD Radio™ technology available in US-version only.**

FM – Radio

Selecting FM radio

Select the source "**FM Radio**" with the source selection button (RADIO) on the **F3100** (press repeatedly if necessary) or by turning the **SOURCE** knob on the front panel of the **MP 3100 HV**.

Display

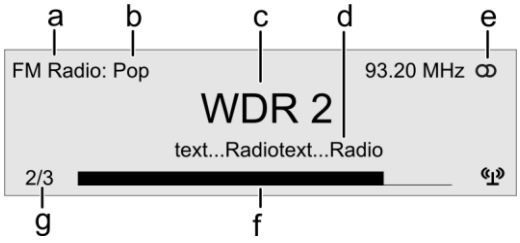

a) Displays the type of reception currently in use.
b) Hear the music type or style is displayed, e.g. Pop Music.
This information is only displayed if the transmitting station broadcasts it as part of the *RDS* system. If you are listening to a station which does not support the *RDS* system, or only supports it in part, these information fields remain empty.
c) The frequency and / or the station name is displayed in enlarged form. If a station name is displayed, its frequency is shown in area 'e'.
d) These lines display information which is broadcast by the station (e.g. Radiotext).
e) Display of Stereo '∞' / Mono '
f) The *field strength* and therefore the reception quality to be expected from the set transmitting station can be assessed from the field strength.
g) **FM Radio**: when receiving an HD Radio broadcast, the screen displays the currently selected programme from the total number of programmes available, e.g. programme 2 of total 3 available.

Manual station search

Holding one of the ◀ / ▶ buttons pressed in initiates a station search for FM tuner in the upward or downward direction. The station search stops automatically at the next station. A frequency can be selected directly by pressing the ◀ / ▶ buttons repeatedly. Briefly pressing the ◀ / ▶ buttons on the **F3100**, repeatedly if necessary, enables you to select a particular frequency.
As soon as the station is audible, you can add it to your Favourites list by pressing the ☺☹ button.

Operation on the front panel
It is also possible to select a frequency directly, by rotating the knob on the machines front panel. By pressing the SELECT knob, repeatedly if necessary, the following operation modes can be temporary selected:

Display indicator	**Function**
Freq	Manual frequency selection
Pres	Selects a Preset from the list
No display (standard setting)	Selects a station from the complete station list

Searching for an HD Radio station

The method of searching for an HD Radio station is the same as for an analogue FM station search. As soon as you select a station with a HD Radio programme, playback automatically switches to the digital programme.
As soon as the **MP 3100 HV** is playing an HD Radio broadcast, the display of reception mode in area “a” (see illustration: FM Radio display) switches to “HD Radio”, while screen area “g” shows the number of available stations, e.g. “1/4” (First HD Radio programme selected from 4 available).

You can switch between the available HD Radio programmes using the ⏮ / ⏭ buttons.

Operation on the front panel
It is also possible to select a frequency directly, by rotating the knob on the machines front panel. By pressing the SELECT knob, repeatedly if necessary, the following operation modes can be temporary selected:

Display indicator	Function
Pres	Selects a Preset from the list
HD	HD Radio programme selection (if available)
Freq	Manual frequency selection
No display (standard setting)	Selects a station from the complete station list

Automatic station search


A long press on the ⚙ button on the front panel or a brief press on the SRC / SYS button on the **F3100** calls up the Station list menu. The following Select points are available:



- If you wish to create a new station list, select the item “**Create new list**” and confirm your choice with OK.
- The station search begins, and automatically searches for all radio stations which the machine is able to pick up.
- If you wish to update an existing list, select the item “**Add new stations**”.
- The menu item “**Sorting by …**” allows you to sort the stored list by any of several criteria.

Selecting a station from the Station list

- Pressing the ▲ / ▼ buttons on the **F3100** or rotating the SELECT knob on the front panel opens the list of all stored stations.

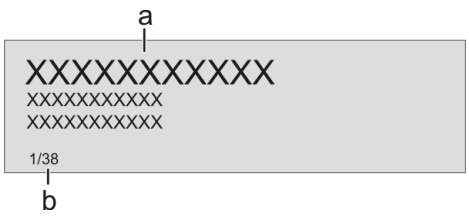

a) Use the ▲ / ▼ buttons to select one of the stored stations.
The station you choose is now displayed in enlarged form.
Press the ▶ or OK button to select the enlarged station for playing.
Pressing the ◀ button returns you to the station to which you are currently listening (quit).

b) Position indicator in the station list.

ⓘ Stations to which you often listen can be stored in a Preset list; this makes it easier to select them (see the section entitled “**Preset list**”).

RDS functions

If the station being received is broadcasting relevant RDS data, the following information will be displayed on the screen:

- **Station name**
- **Radiotext**
- **Program Service Data (PSD)***

For stations that do not support the RDS system or only partially or with weak reception, no information will be displayed.
* Only possible when receiving HD Radio transmissions.

Switching Radio Text on and off

The Radio text function can be switched on and off by long presses on the ▲▼ ⓘ button on the remote control handset. Repeatedly if necessary.

HD Radio stations are also capable of transmitting what is known as PSD information (e.g. track and performer) in addition to Radiotext. As soon as an HD Radio station is picked up, you can cycle through the following operational states by repeatedly long presses on the ▲▼ ⓘ button:
Radiotext on → PSD information → Radiotext off
If the radio station is not transmitting Radiotext or PSD information, the display remains blank.

Mono / Stereo
(only FM – Radio)

You can toggle the radio of the **MP 3100 HV** between stereo and mono reception by a long press on the ⮌ I/II button on the **F3100** or by a long press on the I/II button on the front panel of the **MP 3100 HV**. The reception mode is shown on the screen by the following symbols:

'●' (Mono) or 'ꝏ' (Stereo)

If the station you wish to listen to is very weak or very distant, and can only be picked up with severe background noise, you should always switch to MONO mode as this reduces the unwanted hiss significantly.

The Mono and Stereo symbols are only shown in the detailed screen display.

DAB - Radio


Selecting DAB radio

Select the source "**DAB Radio**" with the source selection button RADIO on the **F3100** (press repeatedly if necessary) or by turning the **SOURCE** knob on the front panel of the **MP 3100 HV**.

Depending on the frequency band (block), it may take up to two seconds to switch stations when in **DAB mode**.

Since firmware version V1.10 the device supports DAB+ reception via the Swiss cable TV network. For further information about updating the firmware, please refer chapter „Software update“.

Display

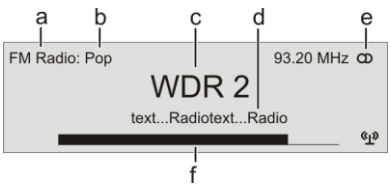

a) Displays the type of reception currently in use.
b) Hear the music type or style is displayed, e.g. Pop Music.
This information is only displayed if the transmitting station broadcasts it as part of the *RDS* system.

If you are listening to a station which does not support the *RDS* system, or only supports it in part, these information fields remain empty.

c) The frequency and / or the station name is displayed in enlarged form. If a station name is displayed, its frequency is shown in area 'e'.These lines display information which is broadcast by the station (e.g. Radiotext).

d) Display of Stereo '∞'.

e) The *field strength* and therefore the reception quality to be expected from the set transmitting station can be assessed from the field strength.

f) Bit-rate of the broadcasting station when listening to DAB radio.

* The higher the bit-rate, the better the station's sound quality.

Automatic station search


A long press on the ⚙ button on the front panel or a brief press on the SRC / SYS button on the **F3100** calls up the Station list menu. The following Select points are available:



- If you wish to create a new station list, select the item "**Create new list**" and confirm your choice with OK.
- The station search begins, and automatically searches for all radio stations which the machine is able to pick up.
- If you wish to update an existing list, select the item "**Add new stations**".
- The menu item "**Sorting by …**" allows you to sort the stored list by any of several criteria.

Selecting a station from the Station list

- Pressing the ▲ / ▼ buttons on the **F3100** or rotating the SELECT knob on the front panel opens the list of all stored stations.

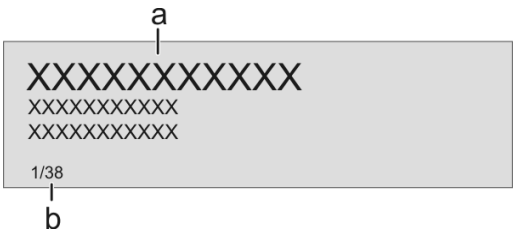

a) Use the ▲ / ▼ buttons to select one of the stored stations. The station you choose is now displayed in enlarged form.

Press the ▶ or OK button to select the enlarged station for playing.

Pressing the ◀ button returns you to the station to which you are currently listening (quit).

b) Position indicator in the station list.

ⓘ Stations to which you often listen can be stored in a Preset list; this makes it easier to select them (see the section entitled "**Preset list**").

RDS functions

ⓘ If the station being received is broadcasting relevant RDS data, the following information will be displayed on the screen:

- **Station name**
- **Radiotext**
- **Program type (genre)**

For stations that do not support the RDS system or only partially or with weak reception, no information will be displayed.

Internet radio

Selecting Internet Radio as source

Select the source "**Internetradio**" with the source selection button (RADIO) on the **F3100** (press repeatedly if necessary) or by turning the **SOURCE** knob on the front panel of the **MP 3100 HV**.


Selecting podcasts

Select the "**Podcasts**" entry instead of the "**Radios**" entry.

The method of operating music services is described separately in the section entitled "**Operating music services**".

Playback

The music content to be played is selected with the help of Select lists. These lists are controlled using the navigation buttons (cursor buttons) on the remote control handset or by the SELECT knob on the machine's front panel.

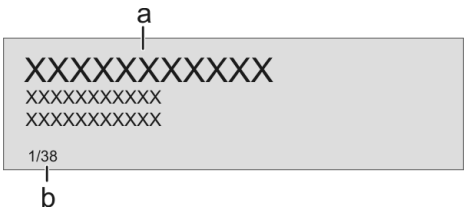

a) Use the (▲) / (▼) buttons to select the desired entry from the list.
A brief press selects the previous / next entry within the list. The scrolling speed can be increased by holding the button pressed.
The list entry you choose is now displayed in enlarged form.
Press the (▶) or (OK) button to open or start the list entry shown in enlarged form.
Pressing the (◀) button returns you to the previous folder level.

b) Indicates the currently selected point within the opened list.

Starting playback
Press the (I▶) button on the remote control handset or the machine's front panel to start playback.

Stopping playback
Pressing the (■) button halts playback.

Favourites list

Stations and podcasts to which you often listen can be stored in a Favourites list; this makes it easier to select them.

Front panel display

While playing back the **MP 3100 HV** can be switched to either of two different screen displays with a long press on the (▲▼ ⓘ) button:

- **Large-format display:**
  Enlarged display of the most important information, clearly legible even from a distance
- **Detail display:**
  Small-text display showing a large number of additional information points, e.g. bit-rate etc.

Search function

The Search function provides a means of locating Internet radio stations swiftly. This is the procedure for searching for a particular Internet radio station:

- Locate the Select list for the entry "**Radio**", then use the (▲) / (▼) buttons to select the "**Search**" item, and confirm your choice by pressing the (OK) button or while navigating within lists alternatively call up the search function by pressing the (▲▼ ⓘ) button.
- You will now see a window in which you can enter the keyword using the remote control handset's alpha-numeric keypad.
- Press the (◀) button to erase any letter.
- Briefly press the (OK) button to start the search.
- After a short delay you will see a list of the search results.

The search function can be called up from every point within the lists by pressing the (▲▼ ⓘ) button.

Search strings can consist of up to eight characters. It is also possible to enter multiple keywords separated by a space character, e.g. "BBC RADIO".

To search for a podcast, select the "Search" entry under "Podcasts".

Operating music services

General information

The **MP 3100 HV** supports playback of music services.
To make use of music services you may need to take out a paid subscription with the appropriate provider.

Use of music services requires the input of access data (username and password. These access data can be stored separately for each provider in the "Music services" menu within the System Configuration menu (see the section entitled "**Basic settings of the MP 3100 HV**").

Future music services and others which are not currently supported may be added subsequently by updates to the firmware of the **MP 3100 HV**.

Selecting a music service

Select the desired music service with the source selection button SCL / USB on the **F3100** (press repeatedly if necessary) or by turning the **SOURCE** knob on the front panel of the **MP 3100 HV**.

If the list of the selected service does not open, this may mean that the access data is not stored or is incorrect (see the section entitled "**Basic settings of the MP 3100 HV / Music services**").

Register with music services

Registration takes place via the T+A MUSIC NAVIGATOR APP.
The following music streaming services are available:
airable radio und podcasts, Qobuz connect, Deezer, Amazon Music HD, highresaudio, Tidal connect, Spotify connect, Apple AirPlay2, Plays with Audirvana, Roon
The use of music services requires the entry of access data (user name and password). These access data can only be created via the T+A Music Navigator App G3 with the OAuth (Open Authorisation) protocol. To do this, select the music service you wish to subscribe to in the app and follow the login instructions. If you want to unsubscribe from a music service, you can use the "Unsubscribe" menu item in the app or the menu of the selected music service on the device

Spotify Connect

- The **MP 3100 HV** supports playback via Spotify.
- Use your phone, tablet or computer as a remote control for Spotify.
- Visit spotify.com/connect to find out more.
- Connect the **MP 3100 HV** and the smartphone/tablet to the same network.
- Start the Spotify app and log in to Spotify.
- Start playback via the Spotify app.
- The **MP 3100 HV** appears in the app in the list of available devices.
- To start playback on the **MP 3100 HV**, select it by tapping on the **MP 3100 HV**.
- Playback now starts via the **MP 3100 HV**.

Apple AirPlay

- The **MP 3100 HV** supports playback via Apple AirPlay.
- To do this, connect the **MP 3100 HV** and the smartphone/tablet to the same network.
- Start the desired AirPlay-compatible app (e.g. iTunes or similar).
- Start playback.
- The **MP 3100 HV** appears in the app in the list of available devices.
- To start playback on the **MP 3100 HV**, select it from the list by tapping on it.
- The source on the MP 3100 HVis automatically switched to AirPlay and playback starts on the **MP 3100 HV**. You can find further information at: https://www.apple.com/airplay/

Tidal Connect

- The **MP 3100 HV** supports playback via TIDAL Connect.
- Use your smartphone, tablet or computer as a remote control for TIDAL.
- Visit https://tidal.com/connect to find out more.
- To start playback via your mobile device, connect the smartphone/tablet of the **MP 3100 HV** to the same network.
- Start the Tidal app and log in.
- Start playback via the Tidal app.
- The **MP 3100 HV** appears in the list of available devices.
- To start playback on the MP 3100 HV, select it by tapping on it.
- The source on the **MP 3100 HV** automatically switches to TIDAL Connect and playback starts on the **MP 3100 HV**.

Apple AirPlay and Tidal Connect can only be activated via the respective app and are therefore not available as sources in the **MP 3100 HV** source selection list.

Qobuz Connect

- The **MP 3100 HV** supports playback via Qobuz connect.
- Use your smartphone, tablet or computer as a remote control for Qobuz.
- Visit https://www.qobuz.com/connect to learn more.
- To start playback from your mobile device, connect the **MP 3100 HV** and smartphone/ tablet to the same network.
- Launch the Qobuz App and log in.
- Start playback via the Qobuz App
- The **MP 3100 HV** appears in the list of available devices.
- To start playback on the **MP 3100 HV**, select it by tapping on it.
- The source on the **MP 3100 HV** automatically switches to Qobuz Connect and playback starts on the **MP 3100 HV**.

Roon Operation

General information


- The **MP 3100 HV** supports playback via Roon. Roon is a paid software solution that manages and organises your music stored on a server. The streaming services TIDAL and Qobuz can also be integrated.

Playback

- Operation is exclusively via the Roon app. The **MP 3100 HV** is recognised as a playback device (client) and can be selected for playback in the app. As soon as Roon is used for playback, ROON appears on the display of the **MP 3100 HV** as the source. Further information on Roon and its operation can be found at: https://roonlabs.com

Playback

The music content to be played is selected via selection lists. These lists are operated using the navigation buttons (cursor buttons) on the remote control or with the SELECT button on the front of the device.

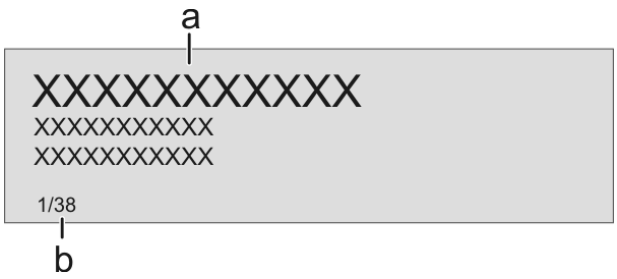

a) Use the ▲ / ▼ buttons to select a service / folder / title from the list.

A short tap selects the previous / next entry in the list. The scrolling speed can be increased by holding down the buttons.
The selected list entry is displayed enlarged.
The ▶ or OK button opens / starts the enlarged list entry.
Press the ◀ button to return to the previous folder level.

b) Displays the currently selected position within the open list.

Starting playback

Press the ▶❙ button on the remote control handset or the machine's front panel to start playback.

Stopping playback

Pressing the ■ button halts playback.

Skipping tracks

A brief press on the ⏮ / ⏭ buttons during playback causes the device to jump to the next or previous piece of music within the current playlist.

The exact form of the displayed list and the preparation of the content depend to a large extent on the music service provider. You may therefore find that in some cases not all the functions described in these instructions can be used.

Starting playback
Press the ⏯ button on the remote control handset or the machine's front panel to start playback.

Stopping playback
Pressing the ■ button halts playback.

Skipping tracks
A brief press on the ▼ / ▲ buttons during playback causes the device to jump to the next or previous piece of music within the current playlist.

The exact form of the displayed list and the preparation of the content depend to a large extent on the music service provider. You may therefore find that in some cases not all the functions described in these instructions can be used.

Playlists and favourites

Most music services offer the facility to register on the provider's website with the user data, create dedicated playlists, and manage the lists conveniently.
Once created, the playlists appear in the Select list of the corresponding music service, where they can be called up and played via the **MP 3100 HV**.
The location within the select list at which the playlists can be accessed varies from one music service to another. Often these folders are named "My music", "Library", "Favourites" or similar.

Front panel display

While playing back the **MP 3100 HV** can be switched to either of two different screen displays with a long press on the ▲▼ ⓘ button:

- **Large-format display:**
  Enlarged display of the most important information, clearly legible even from a distance
- **Detail display:**
  Small-text display showing a large number of additional information points, e.g. bit-rate etc.

Operating the UPnP / DLNA source

(Streaming Client)

General information on the streaming client

The **MP 3100 HV** includes a streaming client (SCL). It enables music playback from UPnP network servers (NAS), or music streaming services e.g. Tidal, Qobuz and Roon and Podcasts.
The use of music services requires the entry of access data (username and password). These access data can only be created by means of the T+A Music Navigator App G3 with the OAuth (Open Authorisation) Protocol. To do this, select the music service you want subscribe in the app and follow the login instructions. If you want to log out of a music service, you can use the Logout menu item in the App or on the device the menu of the selected music service. The exact form of the list format and the preparation of the content depends mainly on the capabilities of the network server (NAS) / music streaming service.

Selecting the UPnP / DLNA source

The **MP 3100 HV** supports playback from a local NAS with a UPnP/DLNA compatible music server application. Compatible music servers connected to the network are recognized and displayed by the **MP 3100 HV**. Select the source "UPnP / DLNA" with the source selection button s on the F3100 (press repeatedly if necessary) or by turning the SOURCE knob on the front panel of the **MP 3100 HV**.

Two apps are available for controlling the **MP 3100 HV** via Apple iOS and Android operating systems. Please download the appropriate version from the Appstore and install it on your tablet PC or smartphone. You will find the app under the name "T+A MUSIC NAVIGATOR" in the Appstore. Alternatively, you can also scan the QR code printed below.

Android Version


Apple iOS Version

Streaming Services of the Streaming Client

airable radio und podcasts, Tidal, Qobuz, Deezer, Amazon Music HD, highresaudio, Tidal connect, Spotify connect, Apple AirPlay2, Plays with Audirvana, Roon

Playback

The music content to be played is selected with the help of Select lists. These lists are controlled using the navigation buttons (cursor buttons) on the remote control handset or by the SELECT knob on the machine's front panel.

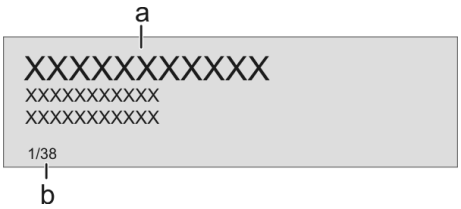

a) Use the ▲ / ▼ buttons to select the desired entry (Server / Folder / Track) from the list.

   A brief press selects the previous / next entry within the list. The scrolling speed can be increased by holding the button pressed.

   The list entry you choose is now displayed in enlarged form.

   Press the ▶ or OK button to open or start the list entry shown in enlarged form.

   Pressing the ◀ button returns you to the previous folder level.

b) Indicates the currently selected point within the opened list.

ⓘ The exact form of the displayed list and the preparation of the content also depend to a large extent on the capabilities of the server, i.e. the full facilities of the **MP 3100 HV** cannot be exploited with all servers or media. You may therefore find that in many cases not all the functions described in these instructions can be used.

Starting playback
Press the ▷II button on the remote control handset or the machine's front panel to start playback.

Stopping playback
Pressing the ■ button halts playback.

Skipping tracks
A brief press on the ▲ / ▼ buttons during playback causes the device to jump to the next or previous piece of music within the current playlist.

Playback of directories

If the currently selected directory contains subdirectories with additional playable content alongside playable items, these will also be played.

Search function

The search function is only available with server-side support and can be used via the 'T+A MUSIC NAVIGATOR' app.

Playing USB memory media

(USB Media source)

General information

The **MP 3100 HV** is capable of playing music files stored on USB memory media, and features two USB sockets for this purpose: **USB IN** on the machine's front panel, and **USB HDD** on the back panel.

The memory medium can be formatted with any of the following file systems:
FAT16, FAT32, NTFS, ext2, ext3 or ext4.


It is also possible to power the USB memory medium via the USB socket, provided that the unit's current drain accords with the USB norm. Normed 2.5 inch USB hard discs can be connected to the socket directly, without requiring their own mains PSU.

Selecting USB Media as source

Select the source "**USB Media**" with the source selection button (SCL / USB) on the **F3100** (press repeatedly if necessary) or by turning the **SOURCE** knob on the front panel of the **MP 3100 HV**.
All USB memory media connected to the machine are now displayed. If no USB memory medium is found, the screen displays the message "**No data available**".

Playback

The music content to be played is selected with the help of Select lists. These lists are controlled using the navigation buttons (cursor buttons) on the remote control handset or by the SELECT knob on the machine's front panel.

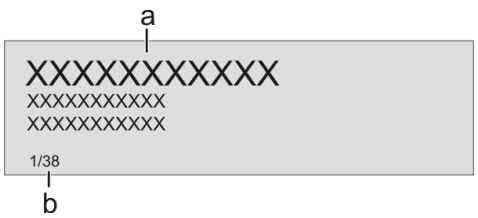

a) Use the (▲) / (▼) buttons to select an (a) **USB memory / folder / track** from the list.

   A brief press selects the previous / next entry within the list. The scrolling speed can be increased by holding the button pressed.

   The list entry you choose is now displayed in enlarged form.

   Press the (▶) or (OK) button to open or start the list entry shown in enlarged form.

   Pressing the (◀) button returns you to the previous folder level.

b) Indicates the currently selected point within the opened list.

Starting playback
Press the (▷II) button on the remote control handset or the machine's front panel to start playback.

Stopping playback
Pressing the (■) button halts playback.

Skipping tracks
A brief press on the (▲) / (▼) buttons during playback causes the device to jump to the next or previous piece of music within the current playlist.

Playback of directories

If the currently selected directory contains subdirectories with additional playable content alongside playable items, these will also be played.

Front panel display

While playing USB memory media the **MP 3100 HV** can be switched to either of two different screen displays with a long press on the ▲▼ ⓘ button:

- **Large-format display:**
  Enlarged display of the most important information, clearly legible even from a distance
- **Detail display:**
  Small-text display showing a large number of additional information points, e.g. bit-rate etc.


Operating the DISC player

Selecting the disc player as source

Select the source "**Disc**" with the source selection button (DISC) on the **F3100** or by turning the **SOURCE** knob on the front panel of the **MP 3100 HV**.

Inserting a CD

- Open the CD drawer (⏏ on the front panel / ■ F3100)
- Place the disc **centrally** in the appropriate depression in the drawer, **with the side to be played facing down**.

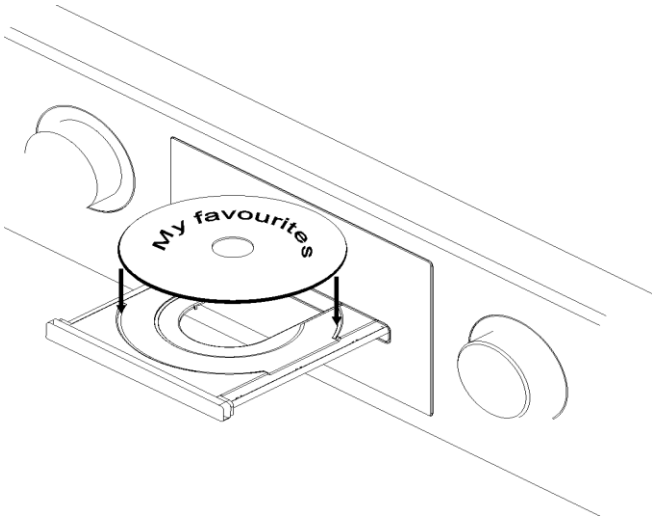

- Close the CD drawer (⏏ on the front panel / ■ **F3100**)

When you close the drawer, the machine immediately reads the CD's 'Table of Contents'; the screen displays the message **'Reading'**. During this period all button-presses are ignored.

The screen then displays the total number of tracks on the CD in the drawer, e.g.: **'13 Tracks 60:27'**.

- It is also shows the current mode of operation, e.g. ■

Front panel display

In disc mode the **MP 3100 HV** can be switched to either of two different screen displays with a long press on the (▲▼ ⓘ) button:

- **Large-format display:**
  Enlarged display of the most important information, clearly legible even from a distance
- **Detail display:**
  Small-text display showing a large number of additional information points, e.g. bit-rate etc.

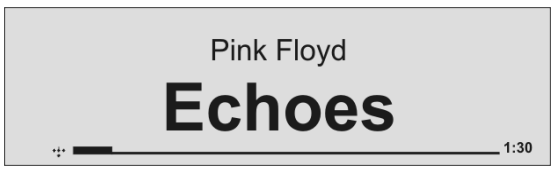


Fig.
Large format display



Fig.
Detail display

Playing a CD

Press the rotary knob on the front panel or the ▷II button **F3100** remote control handset to begin the playback process.

Playback starts, and the screen shows the mode of operation (▶) and the number of the track currently being played: **'Track 1'**.

The CD stops after the final track, and the screen again displays the total number of CD tracks and the overall running time.

Variations

If you press the ▷II / OK button after placing the CD in the machine, the drawer closes and playback starts with the first track.

The open drawer also closes if you enter the number of a track using the remote control handset.

You can interrupt playback at any time by pressing the ▷II button. During the interruption the screen displays the ❙❙ symbol.

Press the ▷II button again to resume playback.

Briefly pressing the ▶▶| button during playback causes the player to skip to the start of the next track.

Briefly pressing the |◀◀ button during playback causes the machine to skip back to the start of the preceding track.

A brief press on the ■ button concludes playback.

A long press on the ■ button opens the CD drawer.

Track Select During playback

Briefly press the ▼ or ▲ button on the **F3100** repeatedly until the number of the track you want to hear appears on the integral screen.

Releasing the button interrupts playback briefly, and after this the desired track is played.

ⓘ You can also enter the number of the desired track directly using the numeric buttons on the remote control handset.

Playback mode

The CD player in the **MP 3100 HV** features various playback modes. During playback the current playback mode is shown on the screen.

Repeat
⮌

Brief press:

Repeatedly pressing the ⮌ I/II button causes the machine to cycle through different playback modes.

'Repeat All' / **'Repeat Program'**	The tracks of the CD or a *playback program* are continuously repeated in the **preset sequence**.
'Repeat Track'	The track of the CD or a *playback program* which has just been played is continuously repeated.
'Normal' / **'Program'**	Normal playback of the whole disc, or normal program playback.
'Mix' / **'Mix Program'**	The tracks of the CD or of a *playback program* are played in a **random sequence**.
'Repeat Mix' / **'Rpt Mix Program'**	The tracks of the CD or of a *playback program* are continuously repeated **in a random sequence**.

Mix mode
⤮

Fast Search

- Fast forward search (hold the ▶ button pressed in)
- Fast reverse search (hold the ◀ button pressed in)

Holding the button pressed in for a long period increases the rate (speed) of search. During the search process the screen displays the current track running time.

Special features with Super Audio CD (SACD)

General information

There are three types of SACD disc: single-layer, dual-layer and hybrid. The hybrid disc contains a standard audio CD layer in addition to a super audio CD.

An SACD should always contain a pure stereo audio track, but it might also include an area containing multi-channel recordings. However, there are a few examples which are pure multi-channel discs, i.e. without a stereo audio track. Since the **MP 3100 HV** is designed to reproduce pure stereo sound only, it is not possible to play back multi-channel discs.

Setting the preferred layer

The **MP 3100 HV** always tries to read the preferred layer first. If this is not available, the alternative layer is read in automatically.

Proceed as follows to set the preferred CD layer (SACD or CD):


- Open the disc drawer by a brief press on the ⏏ button.
- Select the preferred disc layer (SACD or CD) with a long press on the ⮌ I/II button on the **F3100** or by pressing the I/II button directly on the **MP 3100 HV**. If necessary, tap the button twice to select the desired layer. The selected preferred layer will be displayed in the diplay.
- Close the disc drawer by a brief press on the ⏏ button.
- After the CD or SACD layer has been read, playback can be started with the ▷II button.

Note:
It is not possible to switch between the CD and SACD layers when playback is in progress; you must stop the disc and open the disc drawer before switching layers.

If the disc in the drawer does not contain the layer you have set as your preference, the machine automatically reads the other available layer.

Screen display

Play mode indication

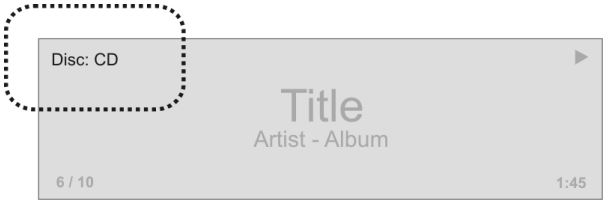

- **Disc: SACD** indicates that the stereo track of an SACD has been read.
- **Disc: CD** indicates that a normal audio CD or the CD layer of a hybrid SACD has been read.

Playback Program

Creating a Playback Program

Explanation

A playback program consists of up to thirty tracks of a CD / SACD stored in any order you like. This can be useful, for example, when you are preparing a cassette recording. A playback program can only be created for the CD currently in the disc drawer of the **MP 3100 HV**. The program remains stored until it is erased again, or until the CD drawer is opened.

Operation

When you place the CD in the drawer, the screen displays the total number of tracks on the disc, e.g.: **'13 Tracks 60:27'**.

A playback programm is created as follows:

- The CD must be stopped.
- Press the **select knob** long or press the ☺☹ button on the remote control handset.
- The screen displays the message **'Add Track 1 to program'**
- Repeatedly press the ▲ or ▼ button briefly until the number of the desired track appears on the screen after **'Track'**.
- Now store the track in the playback program by briefly pressing the OK button.

The screen shows the number of tracks and the total playing time of the playback program. Select all the remaining tracks of the program in the same manner, and store them by briefly pressing the OK button.

ⓘ It is also possible to enter the track directly using the numeric buttons, instead of using the ▲ and ▼ buttons. After you enter the number, press the OK button briefly to store the track, as described above.

If you store thirty tracks, the screen displays the message **'Program full'**.

The playback programming process is concluded when all the desired tracks have been stored.

- End the playback programming process by a long press on the ☺☹ button on the remote control handset or press the **select knob** for about one second.

Playing a playback program

The playback program can now be played.

- Start the playback process by pressing the ▶■ button

Playback starts with the first track of the playback program. The screen displays the message **'Prog'** while a playback program is playing.

The ▲ and ▼ buttons select the previous or next track within the playback program.

Erasing a playback program

Briefly pressing ■ button in **STOP** mode opens the CD drawer, and thereby erases the playback program.

A playback program can also be erased without opening the CD drawer:

- Erase the playback program.

Hold the ☺☹ button pressed in again for about one second

The playback program is now erased.

Operating the Bluetooth source

The **MP 3100 HV**'s integral Bluetooth interface provides a means of transferring music wirelessly from devices such as smart-phones, tablet PCs, etc. to the **MP 3100 HV**.


For a successful audio Bluetooth transfer from a mobile device to the **MP 3100 HV** the mobile device must support the A2DP Bluetooth audio transfer protocol.

Connecting the aerial

An aerial must be connected to the unit for Bluetooth transmission. The aerial is connected to the socket marked **'BLUETOOTH ANT'** on the **MP 3100 HV**.

The aerial should be set up free-standing using the magnetic base supplied in the set; this ensures maximum possible range.

Please refer the wiring diagram shown in **Appendix A.**

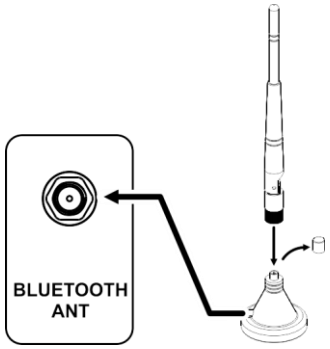

Selecting the Bluetooth Audio source

Select the source "**Bluetooth** " with the source selection button BT on the **F3100** or by turning the **SOURCE** knob on the front panel of the **MP 3100 HV**.

Setting up audio transfer

Before music from a Bluetooth-capable device can be played through the **MP 3100 HV**, the external device must first be registered to the **MP 3100 HV**. As long as the **MP 3100 HV** is switched on and no device is connected, it is always ready to receive. In this state the screen displays the message 'not connected'.

This is the procedure for establishing a connection:

- Start a search for Bluetooth equipment on your mobile device.
- When it finds the **MP 3100 HV**, make the connection to your mobile device.

Once the connection is successfully established, the message on the **MP 3100 HV**'s screen switches to 'connected to *YOUR DEVICE*'.

If your device requests a PIN code, this is always '0000'.

The procedure for establishing a connection can only be made if the Bluetooth source is activated (see chapter **"Basic settings of the MP 3100 HV"**).

Due to the large number of different equipment on the market, we are only able to provide a general description for setting up the radio connection. For detailed information please refer to the operating instructions supplied with your device.

Playback functions

Information on the piece of music currently being played is displayed on the screen of the **MP 3100 HV** if this function is supported by the device connected to the unit.

The behaviour and method of operating the connected mobile device are determined by the device itself. In general terms the function of the buttons of the **MP 3100 HV** or the **F3100** remote control handset are as follows:

Start and pause playback
The ⏯ buttons on the remote control handset or the front panel are used to start and pause playback (PLAY / PAUSE function).

Stop playback
Pressing the ■ button halts playback.

Skipping tracks
A brief press on the ▲ / ▼ buttons during playback causes the device to jump to the next or previous piece of music within the current playlist.

Please note that many AVRCP-capable mobile devices do not support the controlling through the **MP 3100 HV**. In case of doubt, please ask the manufacturer of your mobile device.

Controlling the MP 3100 HV

The **MP 3100 HV** can also be controlled from the mobile device (Start/Stop, Pause, Volume, etc.). To control the **MP 3100 HV** the mobile device must conform to the Bluetooth AVRCP protocol.

Please note that many AVRCP-capable mobile devices do not support all the **MP 3100 HV**'s control functions. In case of doubt, please ask the manufacturer of your mobile device.

NOTES

The **MP 3100 HV** has been tested with a large number of Bluetooth-capable mobile devices. However, we are unable to guarantee general compatibility with all devices available commercially since the range of equipment is so wide, and the various implementations of the Bluetooth standard differ widely in some cases. If you encounter a problem with Bluetooth transfer, please contact the manufacturer of the mobile device.

The maximum range of a Bluetooth audio transfer is normally about 3 to 5 metres, but the effective range may be affected by a number of factors. To achieve good range and interference-free reception there should be no obstacles or persons between the **MP 3100 HV** and the mobile device.

Bluetooth audio transfers take place in what is known as the "everyman frequency band", in which many different radio transmitters operate - including WLAN, garage door openers, baby intercoms, weather stations, etc. Radio interference caused by these other services may cause brief dropouts or - in rare cases - even failure of the connection, and such problems cannot be excluded. If problems of this kind occur frequently in your environment, we recommend that you use the Streaming Client or the USB input of the **MP 3100 HV** instead of Bluetooth.

By their nature, Bluetooth transmissions always involve data reduction, and the attainable sound quality varies according to the mobile device in use, and the format of the music to be played. As a basic rule the maximum quality of music which is already stored in a data-reduced format, such as MP3, AAC, WMA or OGG-Vorbis, is worse than with uncompressed formats such as WAV or FLAC. For the highest reproduction quality we always recommend the use of the Streaming Client or the USB input of the **MP 3100 HV** instead of Bluetooth.

Qualcomm® aptX™

Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries, used with permission. aptX is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries, used with permission

The MP 3100 HV as D/A Converter

General Information on D/A Converter Operation

The **T+A MP 3100 HV** can be used as a high-quality D/A converter for other devices such as computers, streamer, digital radios etc. which are fitted with poor-quality converters or no converter at all. The **MP 3100 HV** features two optical and two electrical S/P-DIF digital inputs on the back panel to allow this usage.
A USB-DAC input on the back panel permits to use the **MP 3100 HV** as D/A converter for computers.

ⓘ You can connect devices with electrical co-axial, BNC, AES-EBU or optical output to the digital inputs of the **MP 3100 HV**. At the optical inputs Digital In 1 and Digital In 2 the **MP 3100 HV** accepts digital stereo signals conforming to the S/P-DIF norm, with sampling rates of 32 to 96 kHz. At the co-ax input and the BNC and AES-EBU inputs Digital In 3 to Digital In 6 the range of sampling rates is from 32 to 192 kHz.

At the **USB DAC IN** input the **MP 3100 HV** accepts digital PCM-encoded stereo signals with sampling rates of 44.1 to 384 kHz (32-bit) and DSD data with sampling rates of DSD64, DSD128, DSD256* and DSD512*.

If you wish the **MP 3100 HV** to convert audio files from a Windows PC connected to it, you must first install driver software on the computer (see the chapter entitled **'USB DAC operation in detail'**).
If you are using a computer running Mac OS X 10.6 or higher, no drivers are necessary.

D/A Converter Operation

Selecting a D/A Converter Source

Select the **MP 3100 HV** as listening source on your amplifier.

After that select the digital input to which you have connected the source device to you want to listen to by turning the SOURCE knob on the device or via the (D IN) button of the **F3100**.

As soon as the source device delivers digital music data, the **MP 3100 HV** automatically adjusts itself to the format and sampling rate of the signal, and you will hear the music.

Screen Display

ⓘ During D/A converter operations the **MP 3100 HV** integral screen displays the characteristics of the digital input signal.

USB DAC operation in detail

System-requirements

- Intel Core i3 or higher or a comparable AMD Processor.
- 4 GB RAM
- USB 2.0 Interface
- Microsoft Windows 11, 10, 8.1, 8, 7,
- MAC OS X 10.6.+

Installing drivers

If the device is to be operated in conjunction with one of the stated **Windows operating systems, a dedicated driver must first be installed**. With the driver installed, it is possible to play DSD streams up to DSD512 and PCM streams up to 384 kHz.

The **MP 3100 HV** can be operated on the listed **MAC and Linux operating systems without** installed **drivers.**
With MAC operating systems the playback of DSD streams up to DSD128 and PCM streams up to 384 kHz is possible.
With Linux operating systems the playback of DSD streams up to DSD512 and PCM streams up to 384 kHz is possible

The required driver, together with detailed installation instructions including information on audio playback via USB, are available for downloading from our website at **http://www.ta-hifi.com/support**

Settings

A number of system settings have to be altered if you wish to operate **MP 3100 HV** with your computer. These changes must be made regardless of the operating system. The installation instructions provide detailed information on how and where the settings are to be changed.

Notes on software

By default, the operating systems listed above do not support 'native' music playback. This means that the PC always converts the data stream to a fixed sample rate, regardless of the sample rate of the file to be played. Separate software is available - e.g. J. River Media Center or Foobar - which prevents the operating system converting the sample rate.
The installation instructions included in the driver package contain further information on audio playback via USB.

Notes on operation

To prevent fail functions and system crashes of your computer and the playback program, please note the following:

- For Windows OS: Install the driver before you use the **MP 3100 HV** for the first time.
- Use only drivers, streaming methods (e.g. WASAPI, Directsound) and playback software which are compatible to your operating system and between each other.
- Never connect or disconnect the USB connection while the system is running.

Notes on setting up

Do not set up the **MP 3100 HV** on or immediately adjacent to the computer to which it is connected, otherwise the device could be affected by interference radiated by the computer.

Playback with ROON

General information

The **MP 3100 HV** supports playback via Roon.
Roon is a fee required software solution that manages and organizes your music stored on a server. Furthermore the streaming service TIDAL can be integrated.

Playback


The operation is exclusively done via the Roon-App. The **MP 3100 HV** is recognized as a playback device (client) and can be selected for playback in the app. As soon as Roon is used for playback, "Roon" appears on the **MP 3100 HV** display as source.

Further information about Roon and its operation can be found at:
https://roonlabs.com

Installation
Using the system for the first time
Safety notes

This section describes all those matters which are of fundamental importance when setting up and first using the equipment. This information is not relevant in daily use, but you should nevertheless read and note it before using the equipment for the first time.

Back panel connections

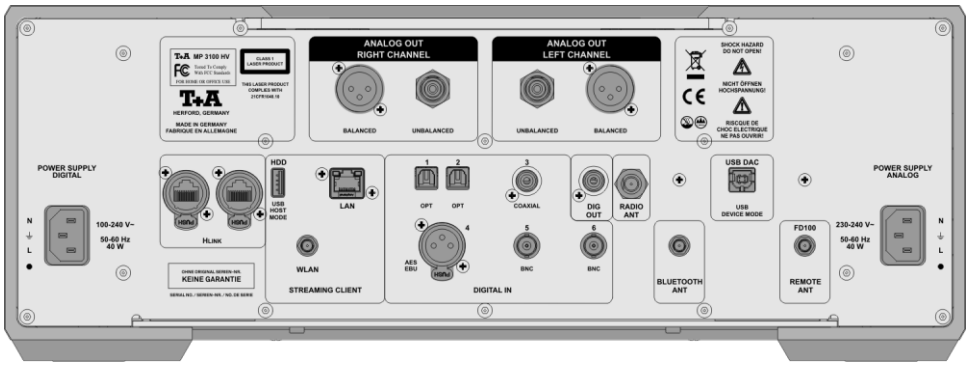

ANALOG OUT	**BALANCED**	The symmetrical XLR output delivers analogue stereo signals with a fixed level. It can be connected to the CD-input (line input) of any stereo pre-amplifier, integrated amplifier or receiver.
		ⓘ If both types of connection are present on the connected amplifier, we recommend the symmetrical option to obtain the best possible sound quality.
	UN-BALANCED	The unbalanced RCA output of the **MP 3100 HV** delivers analogue stereo signals with a fixed level. It can be connected to the CD-input (line input) of any stereo pre-amplifier, integrated amplifier or receiver.
HLINK		Control input / output for T+A **H**LINK – systems: Both sockets are equivalent – one is used as input, the other one serves as output towards other **H**LINK devices.
USB HDD **(Host mode)**		Socket for a USB memory stick or external hard discs The storage medium can be formatted with the FAT16, FAT32, NTFS, ext2, ext3 or ext4 file system.
		ⓘ The USB storage medium can be powered directly via the USB port provided that its current drain is in accordance with the USB norm. Normalised 2.5” USB hard discs can be connected directly, i.e. without a separate mains PSU.
LAN		Socket for connection to a wired LAN (Ethernet) home network.
		ⓘ If a LAN cable is connected this will have priority over wireless WLAN networks. The WLAN module of the **MP 3100 HV** will automatically be disabled.
WLAN		Input socket for WLAN antenna
		ⓘ **Automatic activation of the WLAN module** After powering on the **MP 3100 HV** detects if it is connected to a wired LAN Network. If no wired LAN connection is found, the **MP 3100 HV** will automatically activate its WLAN module and it will try to get access to your WLAN network. The aerial should be set up free-standing using the magnetic base supplied in the set; this ensures maximum possible range. Please refer the wiring diagram in Appendix A.

DIGITAL IN

Inputs for digital source devices with optical, co-axial (RCA / BNC) or AES-EBU digital outputs.

At its optical (Dig 1 und Dig 2) digital inputs the **MP 3100 HV** accepts digital stereo signals (S/P-DIF signals) with sampling rates from 32kHz up to 96 kHz. At the RCA (Dig 3), BNC and AES-EBU inputs (Dig 4 … Dig 6) sampling rates in the range 32 to 192 kHz are supported.

DIGITAL OUT

Digital co-axial output for connection to an external digital/analogue converter with an co-axial cable.

It is not always possible to produce a digital version for all media, as in some cases the original contains copy protection measures which prevent this.

BLUETOOTH ANT

Socket for connecting the bluetooth aerial.

RADIO ANT

The **MP 3100 HV** features a 75 Ω aerial input **FM ANT**, which is suitable both for a normal domestic aerial and a cable connection. For first-class reception quality a high-performance, professionally installed aerial system is indispensable.

USB DAC

(Device mode)

Socket for connecting a PC or MAC computer.

At this input the **MP 3100 HV** accepts digital **PCM** stereo signals with sampling rates in the range **44.1** to **384 kSps**, and digital **DSD** stereo signals from **DSD64** to **DSD512*.**

* **DSD256** and **DSD512** only with a Windows PC.

If you wish the **MP 3100 HV** to convert audio files from a Windows PC connected to it, you must first install the appropriate drivers on the computer. No drivers are required if you are using a Linux or MAC computer (see the chapter **'USB DAC operation in detail'**).

POWER SUPPLY

To avoid any coupling of unwanted noise signals from the digital power supply to the analog power supply of the MP 3100 HV, the digital and analogue power supplies are located in separate shielded compartments on the left and right sides of the device. For best possible separation the power supplies have their own separate power supply sockets.

Always connect both mains sockets to the mains supply when operating the MP 3100 HV.

Digital power supply

The mains lead for the digital power supply is plugged into this socket.

Analogue power supply

The mains lead for the analogue power supply is plugged into this socket.

For correct connections refer to the sections **'Installation and wiring'** and **'Safety notes'**.

Installation and wiring







Carefully unpack the unit and store the original packing material carefully. The carton and packing are specially designed for this unit and will be needed again if you wish to move the equipment at any time.

If you have to transport the device, it must always be carried or sent in its original packaging in order to prevent damage and defects.

The device is extremely heavy - caution is required when unpacking and transporting it. Always lift and transport the device with two persons.
Legal requirements pertaining to the lifting of heavy loads prohibit the transport of the device by women.
Ensure that you have a firm, secure hold on the device. Do not let it fall. Wear safety footwear when moving the device. Take care not to stumble. Ensure an unobstructed area of movement by removing obstacles and possible hindrances from the route.
Take care when lowering the device! To avoid your fingers being crushed, ensure that they are not trapped between the device and the support surface.
If the unit gets very cold (e. g. when being transported), condensation may form inside it. Please do not switch it on until it has had plenty of time to warm up to room temperature, so that any condensation evaporates completely.
If the device has been in storage, or has not been used for a protracted period (> two years), it is essential to have it checked by a specialist technician before re-use.
Before placing the unit on sensitive laquer or wood surfaces please check the compatibility of the surface and the unit's feet on a non visible point and if necessary use an underlay. We recommend a surface of stone, glass, metal or the like.

The unit should be placed on a rigid, level base (See also chapter **"Safety notes"**). When placing the unit on resonance absorbers or anti-resonant components make sure that the stability of the unit is not reduced.

The unit should be set up in a well ventilated dry site, out of direct sunlight and away from radiators.

The unit must not be located close to heat-producing objects or devices, or anything which is heat-sensitive or highly flammable.

Mains and loudspeaker cables, and also remote control leads must be kept as far away as possible from signal leads and antenna cables. Never run them over or under the unit.

Notes on connections:

A complete connection diagram is shown in **'Appendix A'** .

- Be sure to push all plugs firmly into their sockets. Loose connections can cause hum and other unwanted noises.
- When you connect the input sockets of the amplifier to the output sockets on the source devices always connect like to like, i. e. **'R'** to **'R'** and **'L'** to **'L'**. If you fail to heed this then the stereo channels will be reversed.
- The device is intended to be connected to mains outlet with protective earth connector. Please connect it only with the mains cables supplied to properly installed mains outlets with protective earth connector.
- To achieve maximum possible interference rejection the mains plug should be connected to the mains socket in such a way that phase is connected to the mains socket contact marked with a dot (●). The phase of the mains socket can be determined using a special meter. If you are not sure about this, please ask your specialist dealer.

We recommend the use of the T+A **'POWER THREE'** ready-to-use mains lead in conjunction with the **'POWER BAR'** mains distribution panel, which is fitted with a phase indicator as standard.

When you have completed the wiring of the system please set the volume control to a very low level before switching the system on.

The screen on the **MP 3100 HV** should now light up, and the unit should respond to the controls.

If you encounter problems when setting up and using the amplifier for the first time please remember that the cause is often simple, and equally simple to eliminate. Please refer to the section of these instructions entitled ***'Trouble shooting'***.

Loudspeaker and signal cables

Loudspeaker cables and signal cables (inter-connects) have a significant influence on the overall reproduction quality of your sound system, and their importance should not be under-estimated. For this reason **T+A** recommends the use of high-quality cables and connectors.

Our accessory range includes a series of excellent cables and connectors whose properties are carefully matched to our speakers and electronic units, and which harmonise outstandingly well with them.

For difficult and cramped situations the **T+A** range also includes special-length cables and special-purpose connectors (e. g. right-angled versions) which can be used to solve almost any problem concerning connections and system location.

Mains cables and mains filters

The mains power supply provides the energy which your sound system equipment needs, but it also tends to carry interference from remote devices such as radio and computer systems.

Our accessory range includes the specially shielded **'POWER THREE'** mains cable and the **'POWER BAR'** mains filter distribution board which prevent electro-magnetic interference from entering your Hi-Fi system. The reproduction quality of our systems can often be further improved by using these items.

If you have any questions regarding cabling please refer to your specialist **T+A** dealer who will gladly give you comprehensive expert advice without obligation. We would also be happy to send you our comprehensive information pack on this subject.

Care of the unit


Disconnect the mains plug at the wall socket before cleaning the case.
The surfaces of the case should be wiped clean with a soft, dry cloth only.
Never use solvent-based or abrasive cleaners!
Before switching the unit on again, check that there are no short-circuits at the connections, and that all cables are plugged in correctly.

Storing the unit

If the device has to be stored, place it in its original packaging and store it in a dry, frost-free location. Storage temperature range 0...40 °C

Changing the batteries

Remove the screw marked in the figure below, to open the battery compartment, then withdraw the cover. Insert two new cells of the **LR 03 (MICRO)** type, taking care to maintain correct polarity as shown. Please note that you must **always replace all the cells**.

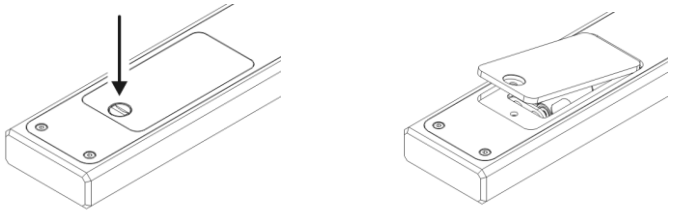

Caution!
Batteries shout not be exposed to excessive heat like sunshine, fire or the like.

Disposing of exhausted batteries

Exhausted batteries must never be thrown into the household waste! They should be returned to the battery vendor (specialist dealer) or your local toxic waste collection point, so that they can be recycled or disposed in a proper way. Most local authorities provide collection centres for such waste, and some provide pick-up vehicles for old batteries.

Safety notes

For your own safety please consider it essential to read these operating instructions right through, and observe in particular the notes regarding setting up, operation and safety.

Installation

Please consider the weight of the device. Never place the device on an unstable surface; the machine could fall off, causing serious or even fatal injury. Many injuries, especially to children, can be avoided if the following simple safety precautions are observed:

- Use only such items of furniture which can safely bear the weight of the device.
- Ensure that the device does not project beyond the edges of the supporting furniture.
- Do not place the device on tall furniture (e.g. bookshelves) without securely anchoring both items, i.e. furniture and device.
- Explain to children the hazards involved in climbing on furniture to reach the device or its controls.

When installing the unit on a shelf or in a cupboard it is essential to provide an adequate flow of cooling air, to ensure that the heat produced by the unit is dissipated effectively. Any heat build-up will shorten the life of the unit and could be a source of danger. Be sure to leave free space of 10 cm around the unit for ventilation.

If the system components are to be stacked then the amplifier must be the top unit. Do not place any object on the top cover.

The unit must be set up in such a way that none of the connections can be touched directly (especially by children). Be sure to observe the notes and information in the section **'Installation and Wiring'**.

Connection

The terminals marked with the ⚠-symbol can carry high voltages.
Always avoid touching terminals and sockets and the conductors of cables connected to them. Unless ready-made cables are used, all cables connected to these terminals and sockets must always be deployed by a trained person.

Power supply

The device is intended to be connected to mains outlet with protective earth connector. Please connect it only with the mains cable supplied to a properly installed mains outlet with protective earth connector.
The power supply required for this unit is printed on the mains supply socket. The unit must never be connected to a power supply which does not meet these specifications. If the unit is not to be used for a long period disconnect it from the mains supply at the wall socket.

Mains leads / Mains plug

Mains leads must be deployed in such a way that there is no danger of damage to them (e. g. through persons treading on them or from furniture). Take particular care with plugs, distribution panels and connections at the device.

To disconnect the device completely from mains power supply, the mains plugs must be withdrawn from the wall socket. Please make sure that the mains plugs is easily accessible.

Enclosure openings

Liquid or particles must never be allowed to get inside the unit through the ventilation slots. Mains voltage is present inside the unit, and any electric shock could cause serious injury or death. Never exert undue force on mains connectors.
Protect the unit from drips and splashes of water; never place flower vases or fluid containers on the unit.
Do not place naked flame sources, such as candle lights on the device.

Supervision of device operation

Like any other electrical appliance this device should never be used without proper supervision. Take care to keep the unit out of the reach of small children.

Service, Damage

The case should only be opened by a qualified specialist technician. Repairs and fuse replacements should be entrusted to an authorised **T+A** specialist workshop. With the exception of the connections and measures described in these instructions, no work of any kind may be carried out on the device by unqualified persons.

If the unit is damaged, or if you suspect that it is not functioning correctly, immediately disconnect the mains plug at the wall socket, and ask an authorised **T+A** specialist workshop to check it.

Over voltage

The unit may be damaged by excess voltage in the power supply, the mains circuit or in aerial systems, as may occur during thunderstorms (lightning strikes) or due to static discharges.
Special power supply units and excess voltage protectors such as the **T+A 'Power Bar'** mains distribution panel offer some degree of protection from damage to equipment due to the hazards described above.
However, if you require absolute security from damage due to excess voltage, the only solution is to disconnect the unit from the mains power supply and any aerial systems.
To avoid the risk of damage by overvoltages we recommend to disconnect all cables from this device and your HiFi system during thunderstorms.
All mains power supply and aerial systems to which the unit is connected must meet all applicable safety regulations and must be installed by an approved electrical installer.

Approved usage



The device is designed to operate in a temperate climate and altitudes up to 2000 m above sea level. The range of permissible operating temperatures is +10 … +30°C. This device is designed exclusively for reproducing sound and/or pictures in the domestic environment. It is to be used in a dry indoor room which meets all the recommendations stated in these instructions.
Where the equipment is to be used for other purposes, especially in the medical field or any field in which safety is an issue, it is essential to establish the unit's suitability for this purpose with the manufacturer, and to obtain prior written approval for this usage.

Approval and conformity with EC directives

In its original condition the unit meets all currently valid European regulations. It is approved for use as stipulated within the EC.
By attaching the CE symbol to the unit **T+A** declares its conformity the EC directives and the national laws based on those directives. The declaration of conformity can be downloaded from **www.ta-hifi.com/DoC**.
The original, unaltered factory serial number must be present on the outside of the unit and must be clearly legible! The serial number is a constituent part of our conformity declaration and therefore of the approval for operation of the device. The serial numbers on the unit and in the original **T+A** documentation supplied with it (in particular the inspection and guarantee certificates), must not be removed or modified, and must correspond.
Infringing any of these conditions invalidates **T+A** conformity and approval, and the unit may not be operated within the EC. Improper use of the equipment makes the user liable to penalty under current EC and national laws.
Any modifications or repairs to the unit, or any other intervention by a workshop or other third party not authorised by **T+A**, invalidates the approval and operational permit for the equipment.
Only genuine **T+A** accessories may be connected to the unit, or such auxiliary devices which are themselves approved and fulfil all currently valid legal requirements.
When used in conjunction with auxiliary devices or as part of a system this unit may only be used for the purposes stated in the section ***'Approved usage'***.

Disposing of this product



The only permissible method of disposing of this product is to take it to your local collection centre for electrical waste.

FCC Information to the user



(for use in the United States of America only)

Class B digital device – instructions:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different form that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Network Configuration

General Information

The **MP 3100 HV** can be operated in wired LAN networks (*Ethernet LAN* or *Powerline LAN*) or in wireless networks (*WLAN*).

If you wish to use your **MP 3100 HV** in your home network, you must first enter the necessary network settings on the **MP 3100 HV**. This includes entering the network parameters such as the IP address etc. both for wired and wireless operation. If you wish to use a wireless connection, a number of additional settings for the WLAN network also have to be entered.

Please refer to the Chapter **'Glossary / Additional Information' and 'Network Terms'** for additional explanations of terminology relating to network technology.

In the following sections we assume that a working home network (cable network of WLAN network) **with router and (DSL) Internet access is present.**
If you are unclear about some aspect of installing, setting up and configuring your network, please address your queries to your network administrator or a network specialist.

Compatible hardware and UPnP servers

The marketplace offers a vast number of routers, NAS devices and USB hard discs made by a very wide range of manufacturers. **T+A** equipment is generally compatible with other makes of machine which bear the UPnP label.

Network settings menu

All network settings are entered in the Network Configuration menu. This menu will vary slightly in appearance depending on the type of your network, i.e. whether you have a wired (LAN) or wireless (WLAN) network.

If in the Network Configuration Menu the entry 'Network IF Mode' is set to 'auto', the **MP 3100 HV** will check automatically if a LAN connection to a network is present. If a LAN connection is found, the machine will assume that this is to be used, and displays the network configuration menu for LAN networks.
If no LAN network is connected, the **MP 3100 HV** activates its WLAN module and displays the WLAN configuration menu when you call up the configuration menu. The menu for a WLAN network includes a number of additional menu points. The following sections explain how to use the menu, and the meaning of the individual menu points.

Opening the network settings menu

Open the System Configuration menu by a long press on the SRC / SYS button on the remote control handset or a brief press on the ⚙ button on the front panel of the **MP 3100 HV**.
Use the ▲ / ▼ buttons to select the "**Network**" menu item, then confirm by pressing the OK button.

Operating the nenu, changing and storing IP addresses

Use the ▲ / ▼ buttons in the menu to select the network parameter to be changed, and activate the entry with the OK button.

You can now change the setting using the following buttons, depending on the type of setting:

◀ / ▶ button	for simple selection (ON / OFF)
Numeric buttons 0 to 9	for entering IP addresses
Alpha-numeric input	for entering text

When the setting process is complete, or when you have entered the complete address, press the OK button to confirm your action.

Alpha-numeric entry

At certain points, e.g. for entering server names or passwords, it is necessary to input series of characters (strings). At such points you can enter letters, numbers and special characters by repeatedly pressing the numeric buttons on the **F3100** remote control handset, as when writing SMS news. The assignment of letters to the buttons is printed below the buttons. Special characters can be accessed using the (0) and (1) buttons:

(0) ␣ 0 + - * / ^ = { } ( ) [ ] < >

(1) . , ? ! : ; 1 \ " ' _ @ $ % & # ~

Use the (▲▼ ⓘ) button for toggling between numbers, capitals and lower-case letters. The bottom line of the screen shows which input mode is currently selected.

ⓘ At certain points (e.g. DNS server name) it is possible to enter both an alpha-numeric string and an IP address. At these points an IP address should be entered like a string (with separating dots as special characters). In this case an automatic check for valid address ranges (0 … 255) is not carried out.

Closing the menu

Once you have correctly set all the parameters, select the menu item **'Store and exit?'**, then press the (OK) button. This action causes the **MP 3100 HV** to accept the settings, and you should see the available network media sources (Internet radio, UPnP-AV server, etc.) displayed in the main menu.

Interrupting the menu without storing the settings

At any time you can leave the network configuration menu without making any changes to the network settings: this is done by pressing the (■) button, which takes you to the menu item **'Store and exit?'**. If you wish to quit at this point without saving, use the (▲) / (▼) buttons to select the '**Discard and exit?**' menu item, then confirm with the (OK) button.

The Configuration for a Wired Ethernet LAN or Power-Line LAN connection

Setting the Parameters for a Wired Network

- Connect the **MP 3100 HV** to an operational network or Power-Line modem using the LAN socket on the back panel.
- Switch the **MP 3100 HV** on, Open the System Configuration menu by pressing the SYS button on the remote control handset or the MENU button on the front panel of the **MP 3100 HV**.
- Use the ▲ / ▼ buttons to select the menu point "**Network**", then confirm your choice with the OK button.
- You should now see the menu reproduced below, displaying the network parameters. In the title line the message 'LAN' should appear, indicating that the machine is connected to a wired LAN. If you see 'WLAN' at this point instead, please check your network connection, and ensure that the network is switched on and operational.
- You can now select the individual menu points and adjust them to match your network conditions. The illustration below shows the possible button inputs after each menu item.

Network settings menu		Possible entries
MAC	00:0e:9b:cc:a4:35	none
Connection state	not connected	none
→ Scan for WLAN	apply	OK
DHCP	Off	◄ / ►
IP	192.168.0.10	(0 ... 9)
Subnet mask	255.255.255.0	(0 ... 9)
Gateway	192.168.0.1	(0 ... 9)
DNS	192.168.0.1	(0 ... 9, A ... Z)
Store and exit?	apply	OK
Discard and exit?	apply	OK

◄ / ►: Switching ON / OFF
(0...9): Numeric input, separating dots are automatically generated; input limited to valid addresses
(0...9, A...Z): Alpha-numeric input and special characters.
IP - separating dots must be entered as special characters.

The parameters illustrated above are only typical values.
Addresses and settings may require different values for your network.

Menu Point	Description
MAC	The MAC address is a hardware address which uniquely identifies your machine. The address displayed is determined by the manufacturer, and cannot be altered.
Connection state	Shows the connection state: WLAN, LAN or not connected.
DHCP	**ON** If your network includes a DHCP server, please select the ON setting at this point. In this mode an IP address is automatically assigned to the **MP 3100 HV** by the router. The screen shows only the MAC address and the message DHCP state ON. In this case the address input fields shown in the illustration do not appear in the menu. **OFF** If your network does not include a DHCP server, please select the OFF setting. In this mode you must configure the following network settings manually. Please ask your network administrator for the addresses to be entered for your network.
IP	IP address of the **MP 3100 HV**
Subnet mask	Network mask
Gateway	IP address of the router
DNS	Name / IP of the name server (optional)
Store and exit?	Stores the network parameters, and restarts the **MP 3100 HV** with the new settings.
Discard and exit?	Closes the menu: data already entered is discarded.

The Configuration for a WLAN connection

Configuration using the WPS function

- Activate the WPS-function of the Router or Repeater to which you wish the **MP 3100 HV** to be connected. For details please refer the manual of the device in question.
- Start the WPS-Autoconnect function of the **MP 3100 HV** within 2 minutes.
- Use the cursor up / down buttons to select the menu point "**WPS-Autoconnect**", then confirm your choice with **OK** - the button.
- After the connection is established, the line Status shows the connected WLAN network.
- Finally select the "**Store and exit?**" menu point and press the **OK** - button to accept the settings.

Manual setup of the WLAN connection

- Select the Search for WLAN menu item and confirm this with the **OK** button.
- A list of the WLANs found appears.
- Use the **Up / Down cursor buttons** to select the WLAN to which the **MP 3100 HV** is to be connected, and confirm with the **OK** button.
- Enter the network password (passphrase) and confirm your entry with the **OK** button.
- Confirm and save the settings by selecting **Save and exit?** Select and confirm with **OK**.
- Select the **Save and exit ?** menu item again and confirm the settings again by pressing the **OK** button.

Setting up the WLAN connection via the T+A app (TA Music Navigator)

The **MP 3100 HV** has an access point function to make it easy to set up the network connection.
This is activated automatically if the device is neither connected to the network by cable nor has a WLAN network been configured. This status can be restored at any time, by resetting the **MP 3100 HV** to the factory settings (see chapter **Basic settings of the MP 3100 HV**).
Proceed as follows to set up the device:

Android users

- Connect the smartphone or tablet PC on which the T+A Music Navigator app is installed to the WLAN access point.
- The name of the network (SSID) begins with T+A AP 3Gen_.... – A password is not required.
- Start the app. Permission required for standard.
- The app recognises the access point and automatically starts the setup wizard.
- To set up the WLAN, you must go through the individual steps of the app's setup wizard.
- Exit the app and then connect the smartphone or tablet to the previously set up Wi-Fi.
- After restarting the app, it will automatically search for the **MP 3100 HV**.
- As soon as the **MP 3100 HV** has been found, it can be selected for playback.

iOS (Apple) users

- The **MP 3100 HV** supports the Wireless Accessory Configuration (WAC).
- Switch on the **MP 3100 HV**.
- Open the Settings/Wi-Fi menu on your iOS mobile device.
- As soon as the device has started, you will find an entry starting with SET UP NEW AIRPLAY SPEAKER **MP 3100 HV** -xxxxxx under **Set up new AirPlay speaker**.
- After selecting this entry, you can select the network to which your **MP 3100 HV** can be connected.

After confirming the selection, the network configuration data is automatically transferred to the device and the **MP 3100 HV** connects to the selected network.

Notes on Energy Saving

General information

The **MP 3100 HV** satisfies the requirements of the latest directives concerning energy-saving measures (EuP directive). The modern design of the mains power supply makes an important contribution to this.
The internal micro-processor constantly ensures that sub-assemblies which are not currently required are automatically switched off. The micro-processor itself operates in stand-by mode at a relatively low clock speed, and only responds to the remote control receiver.
In stand-by mode the current drain of the **MP 3100 HV** is less than 0.5 Watt.
If you intend not to use the device for a long period, it should be disconnected from the mains socket, i.e. the mains plug should be withdrawn from the wall socket.

Automatic power-down (Energy saver)

The device features an automatic power-down function. If the **MP 3100 HV** detects no operation or no music signal for a period longer than ninety minutes, it automatically switches to stand-by mode. Two minutes before the device enters the standby mode, a pop-up window appears on the screen. If the device should stay in operation please press the OK button while this message is displayed.

In countries outside the EU, in which the EuP directive has no validity, the automatic power-down feature can be disabled if necessary (see chapter entitled **'Basic settings of the MP 3100 HV**).

Legal Information

General

This product contains software in form of object code that is partially based on free software under different licenses. Details of the licenses used can be viewed on the device website using an Internet browser.

Show licenses

To access the device website, enter the IP address of the device and"/licensens/" in the address line of the browser you are using.
For example **http://192.168.178.100/licenses/**

You can display the exact address as follows:

- Call up the system configuration menu by a long press on the SRC / SYS button.
- Then navigate to the "Device Info" menu item. Open it by pressing the OK -button.
- Navigate to the menu item "Legal information" and open it with the OK --button.
- The pop-up window that now opens shows the address of your device.

The address is only displayed in the pop-up window if the device has a correctly configured network connection. For details on network configuration, see the "Network Configuration" section.

To view the web page of the T+A device, the device on which the Internet browser is started must be connected to the same network as the T+A device.

Firmware update

General information

For updating the firmware of the **MP 3100 HV** there is a convenient method which requires an existing Internet connection
If you are operating the **MP 3100 HV** in conjunction with a **PA 3x00 HV**, the machine can also be updated via the **HLink** connection.

The wiring diagram for the machine is shown in **'Appendix A'**.

The following section describes the exact method of updating the firmware in detail.

Updating via the Internet

Updating the firmware via the MP 3100 HV's Internet connection

- The basic requirement is a functioning network with router and access to a broadband Internet connection; the system must be operating.
- Switch the machine on.
- Call up the System menu by pressing the ⊛ button on the front panel.
- Rotate the SELECT knob on the front panel to select the "**Device info**" menu point, and confirm your selection by pressing the SELECT knob.
- If the **MP 3100 HV** is connected to a **PA 3x00 HV** via the **HLink** connection, the Select Device menu appears at this point. In this case select the device to be updated by turning the SELECT knob, then press the SELECT knob to confirm your choice.

  (If the **MP 3100 HV** is not connected to a **PA 3x00 HV**, the Software Update menu of the **MP 3100 HV** appears directly**.**)
- Select the "**Update**" menu point by rotating the SELECT knob, then press the SELECT knob to confirm your choice.
- The Select option "**WEB**" should now be active (highlighted).
- The firmware update can now be started by pressing the SELECT knob.
- The screen displays the current state of progress of the update.
- Once the update has been completed (duration around ten minutes) the device automatically switches itself off and restarts.
- When the machine has restarted, the update is complete.
- To ensure that the update was successful, access the "**Device Info**" menu point mentioned above, and check the new firmware status.

ⓘ It is also possible to carry out the update process using the F3100 remote control handset, as an alternative to operating the machine directly. The method of operating the menu using the handset is described in the chapter entitled "**Basic settings of the MP 3100 HV**" (Using the remote control handset).

Technical description

Digital filters / Oversampling


Oversampling

The audio data on for example CDs is stored at a sampling rate of 44.1 - i. e. for each second of music 44.100 sampled values are available for each channel. In the **MP 3100 HV** the audio data read from the CD is „multiplied“ to a higher sampling rate (352,8 kHz) before it is converted back into analogueue music signals. This process delivers a very much better, more finely graduated signal to the converter, which can then be converted with correspondingly higher precision. The raised sampling rate is a calculating process for which there are many different mathematical methods. In almost all digital audio devices which exploit the advantages of increased digital sampling rate a process known as a FIR filter is employed for this purpose. At **T+A** we have been carrying out research for more than ten years, aimed at improving the oversampling process, because the standard FIR method has one drawback to set against its indisputable advantages: it adds small pre- and post-echoes to the music signals. At **T+A** we have developed mathematical processes (known as Bezier polynomial interpolators) which do not share this disadvantage. For this reason they should sound better and more natural than the usual standard process. Since the calculating procedure employed by us is considerably more complex than the standard method, the **MP 3100 HV** features a high-performance digital signal processor (DSP) which carries out the over-sampling process with immense precision (56 bit) using special algorithms developed by **T+A**.

The freely programmable DSP which we use is capable of carrying out the oversampling process using any method of calculation. For this reason we have implemented a slightly modified Bezier process (filters 3) in the **MP 3100 HV** in addition to the pure Bezier process (filter 4), together with two variants of the standard process (filter 1 and filter 2). For more information on the different processes please refer to the next section. You can switch between the various algorithms, then decide for yourself which of the filters gives the results you prefer.

Oversampling 1 (Standard FIR Filter)


The long FIR filter is the standard oversampling process in digital technology, offering extremely linear frequency response, very high damping, linear phase characteristics and constant group delays. The disadvantage is the pre- and post-echoes which are added to the signal. These „time range errors“ tend to affect the music signal’s dynamics, precision and naturalness, and reduce spatial orientation.

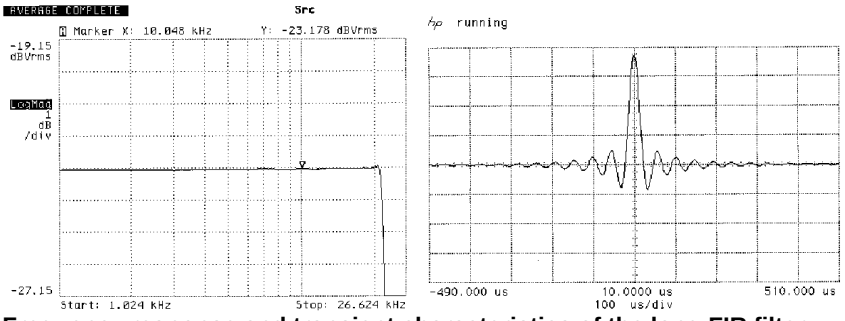

Frequency response and transient characteristics of the long FIR filter

Oversampling 2 (Impulse optimised filter)


Shortening the filter (lower coefficient) reduces the time range errors, albeit combined with a slight loss of linearity in the frequency range and damping performance.

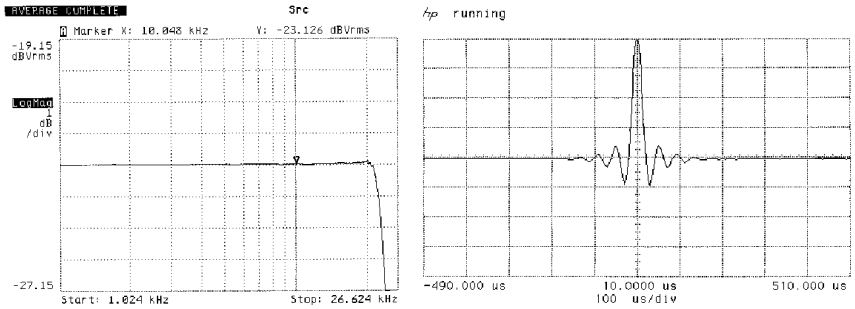

Frequency response and transient characteristics of the short FIR filter

Oversampling 3 (Bezier-interpolator plus IIR-filter)


In this process an ideal Bezier interpolator is combined with what is known as an IIR filter. This eliminates the problematic pre-echo of the FIR method. This process produces highly „analogueue“ system characteristics, with a sound quality and measured performance similar to those of good analogueue record players.

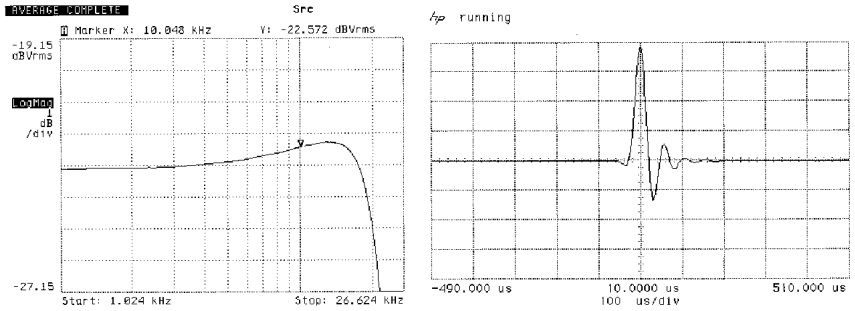

Frequency response and transient characteristics of the Bezier interpolator plus IIR filter

Oversampling 4 (pure **Bezier** interpolator)

This process delivers a perfect reconstruction of the original music signal. It exhibits no pre- or post-echoes of any kind, and does not add coloration or timing errors to the original signal. In sonic terms this method offers an impressive blend of naturalness, good dynamics and accuracy.

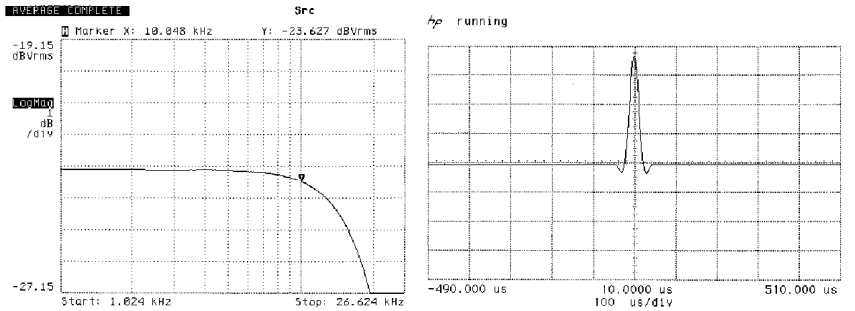

Frequency response and transient characteristics of the Bezier interpolator

Network Terminology

General information

The Switch ensures that the individual components within a network are connected correctly. This is only possible if it can identify each device within the network unambiguously; this is the reason why every component is assigned a form of “house number” (IP address). The IP address consists of four number blocks each containing three digits separated by dots (e.g. 192.168.1.1).

Each of the individual number blocks may contain values between 1 and 254 (the values 0 and 255 are reserved for certain special functions, and should therefore not be used). However, if the network is to operate reliably, the network owner should only select addresses designed for home network use - i.e.: the first two number blocks should always be 192.168.xxx.xxx; the third block can be selected without restriction within the above limits (but should be the same for all devices on the network), and the fourth block must distinguish each device uniquely (e.g.: **MP 3100 HV** 192.168.001.001, NAS: 192.186.001.002, PC: 192.168.001.003, ...).

If this local network is to include Internet music sources (Internet radio) as well as physical devices, then the **T+A MP 3100 HV** must have access to the Internet. This facility is provided by a device such as a router with connection to the DSL network. This router is also a constituent part of the network, and is assigned its own IP address. The **T+A MP 3100 HV** must also be informed of the address of the router (Gateway) to enable it to gain access to the outside world.

ⓘ Please ensure that the first three blocks of the Device IP, Gateway IP and DNS 1 share the same address space (e.g. 192.168.0.xxx). The fourth block assigns a unique address (house number) to the components in the local network. This number must not be present more than once in the local network.
The Device IP mask should always be assigned the address 255.255.255.0.

DNS

The Domain Name System (DNS) is one of the most important services on the Internet. Its primary task is to convert “Internet addresses”, such as www.taelektroakustik.de, into the associated IP address. In most home networks the router carries out the DNS function.
If you decide to configure your network manually (without DHCP), then simply enter the address of your router as the DNS address when configuring the network.

Ethernet-LAN

Wired network. Interference-free network technology, with the drawback of having to deploy a network cable.

Gateway

The computer or router in your network which is responsible for managing data traffic between your home network and the outside world (i.e. the Internet).

Client

Network device which obtains data from the network, decodes it and converts it into, for example, analogueue music signals which can then be reproduced via an amplifier and loudspeakers. Streaming Clients also contain functions for displaying media content, and for navigating on the Internet or servers.

DHCP

DHCP is an abbreviation of **D**ynamic **H**ost **C**onfiguration **P**rotocol. The primary purpose of DHCP is to enable Clients to obtain your network configuration automatically from a server or router.

IP-Adress

Network address. Each device in the network requires an IP address at which it can be accessed, and by which it is unambiguously identifiable. No individual network address may be present more than once. This is important if you are entering network addresses manually. If the addresses in your network are assigned by DHCP, you do not need to worry about IP addresses at all, as the DHCP server manages the addresses automatically without your intervention.

NAS (Network Attached Storage)	Network storage facility. This is generally a very large-capacity (> 200 GB) storage device to which other devices have access. If the NAS server includes a UPnP-AV server service, then the **MP 3100 HV** has access to media files stored on the NAS, and can play them back.
Powerline-LAN	In a Power-Line LAN data is transferred via the existing mains power cabling. Devices known as “Power-Line modems” are required at the transmitting and receiving end. In most cases Power-Line offers relatively problem-free data transfer with adequate data rates for audio streaming. We recommend Power-Line modems with bit rates of 85 or 200 Mbit/s.
Proxy server	A Proxy or Proxy server is a computer in the network which is capable of carrying out data transfers faster and more efficiently, and can increase security through the use of access control mechanisms. Most home networks do not include a proxy server. In this case there is no need to enter a Proxy address when configuring the **MP 3100 HV** network.
Router	Central network device which creates and manages the connections between the network devices. In most networks the router also assumes the function of Gateway to the outside world.
Server	Network device which provides data and services for other devices in the network. For example, a UPnP-AV server typically stores audio / video data, and makes it available to other devices (the Streaming Clients). Many UPnP-AV servers also offer functions such as cataloguing, and easy identification of media content using criteria such as artiste, album name, genre, etc.
UPnP-AV	Network protocol that makes media files available on the home network. On PCs and NAS storage devices a UPnP-AV server software must be installed to enable the **MP 3100 HV** to access media files stored on these devices.
WLAN (also W-LAN, Wireless LAN)	Radio network. The network is connected by means of radio waves operating in the 2.4 GHz frequency band. Radio networks are easy to install as no cables have to be deployed, but they are often problematic and unreliable - especially when the transmission distances are substantial. Power-Line networks, which can also be installed without separate cabling, are a better choice in many situations. In every case the deployment of a network cable is the most reliable and problem-free technology for data transfer.
Compatible hardware and UPnP servers	The marketplace offers a vast number of routers, NAS devices and USB hard discs made by a very wide range of manufacturers. **T+A** equipment is generally compatible with other makes of machine which bear the UPnP label. A list of devices which **T+A** has checked for compatibility can be found on the Internet at: http://www.taelektroakustik.de/hardware/comp_lan_hw.pdf.

Trouble shooting

Many problems have a simple cause and a correspondingly simple solution. The following section describes a few difficulties you may encounter, and the measures you need to take to cure them. If you find it impossible to solve a problem with the help of these notes please disconnect the unit from the mains and ask your authorised **T+A** specialist dealer for advice.

Machine does not switch on	**Cause 1:** Mains lead not plugged in correctly. **Remedy:** Check connection, push connector in firmly.
	Cause 2: Mains switch on the back panel not switched on. **Remedy:** Switch the mains switch on.

FM radio

Whistling or whispering noises from the speakers.	**Cause:** The antenna lead is routed too close to a mains, remote control or audio signal cable. **Remedy:** Move the leads so that they are spaced well apart. Use the domestic (loft or outside) antenna or a cable connection.

The RDS station name does not appear in the display.	**Cause 1:** The station is not broadcasting RDS information.
	Cause 2: Reception is poor, interference is severe, or the *field strength* (signal strength) is low. **Remedy:** Select only those stations which can be received with a strong signal: hiss-free and without interference.

The unit can be operated normally, but very few stations or none at all can be picked up.	**Cause:** The antenna system or antenna cable is faulty. **Remedy:** Check the antenna lead for good contact at the antenna socket (at the wall) and in the back of the tuner. As a test, try using the system with a trailing antenna. If you can now receive stations reasonably well, we recommend that you call out an expert antenna technician to check your antenna system.

CD player

The screen displays the message 'No Disc' when you close the CD drawer.	**Cause 1:** CD not inserted correctly. **Remedy:** Place CD centrally in the drawer, printed face up.
	Cause 2: CD dirty. **Remedy:** Clean disc and insert again.
	Cause 3: CD damaged in the Table of Contents (*TOC*) area. **Remedy:** No remedy; the CD is unusable.
	Cause 4: The CD player has become very cold (e. g. in transit) and condensation has formed on the laser sensor optics. **Remedy:** Allow the unit to warm up for about an hour in a warm, well ventilated location.

CD playback stops or 'jumps'.	**Cause 1:** CD damaged or dirty. **Remedy:** Clean CD. A damaged CD cannot be repaired!
	Cause 2: The CD uses a copy protection system which does not conform to the CD-Audio standard (Red Book Standard) **Remedy:** Take back the CD to the dealer and ask for a proper CD according to the general CD standard.

Streaming Client

The streaming client cannot connect to a network. **On the display the indication 'Cannot connect to...' is displayed.**	**Cause 1 (cable LAN):** Network cable not properly connected **Remedy:** Connect network cable, check connection to router
	Cause 2 (wireless LAN): WLAN reception quality bad (low field strength). Possibly too much attenuated by walls/ceilings on the transmission path. **Remedy:** Optimize location of receiver and transmitter antennas. **Alternative:** If transmission problems persist a so called ‚Power Line' network might be good alternative to establish a good and stable network connection. The best, safest and most secure network however will always be a cable LAN network.
	Cause 3: Network parameters not properly configured. **Remedy:** Configure the network parameters correctly (see chapter **'Network configuration'**).
Transmission interruptions occur when listening to internet radio stations.	**Cause 1:** The capacity of the internet radio station's server is at its limit. **Remedy:** Choose a different station.
	Cause 2: Network problems occurred. **Remedy:** Check your network (see above).
Some internet radio stations cannot be received	**Cause:** The internet radio station has been switched off, it transmits only at certain hours of the day or it has changed its internet address. **Remedy:** Try to get information from the website of the station regarding transmission hours and internet address (URL). Try to establish a connection to the station at a later time.

Bad sound quality at certain internet radio stations	**Cause:** The station transmits with a low audio bandwidth (low bitrate). **Remedy:** Use stations transmitting at least at 128 kBit/s. This is the lowest recommended bitrate for adequate sound quality. For good sound quality we recommend high bitrates like 320 kBit/s

USB Storage device is not recognised	**Cause 1:** The storage device (especially USB hard discs without separate power supply) draws more electrical current from the USB interface than is permitted by the USB standard. **Remedy:** Only use USB storage devices that conform to the USB standard or use storage devices with own power supplies.


Bluetooth

I can not connect my smartphone or similar via bluetooth anymore	**Cause:** Bluetooth pairing has an error and therefore it cannot be re-established. **Remedy:** Delete all Bluetooth pairings in the MP 3100 HV (See chapter "Basic settings" page 19.). Also delete the Bluetooth pairing in your device (e.g. smartphone). Then re-establish the connection.

Appendix A


Wiring diagram symmetric (XLR)

PA 3100 HV

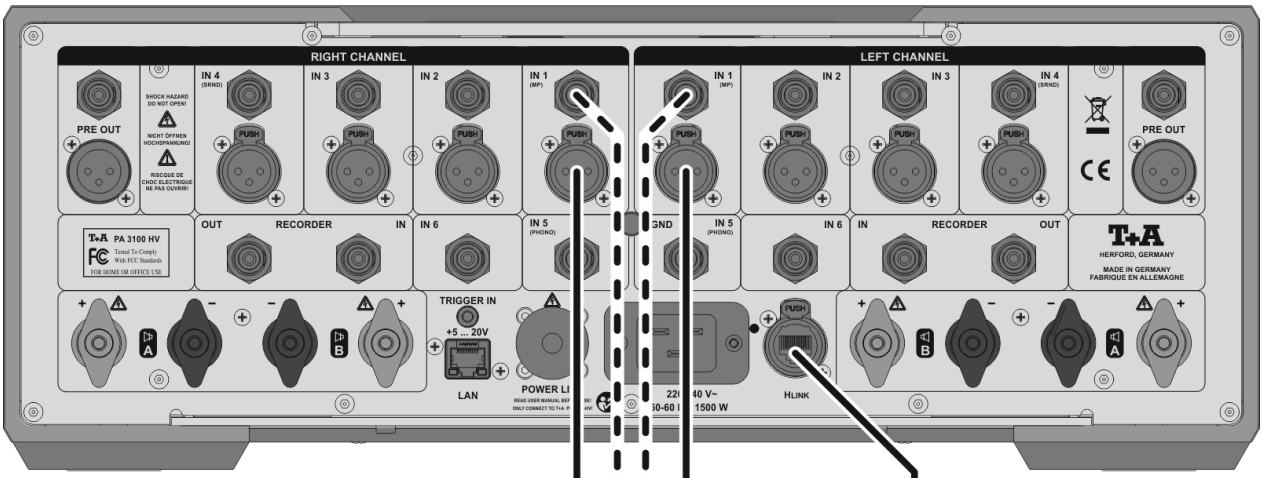

*1


MP 3100 HV

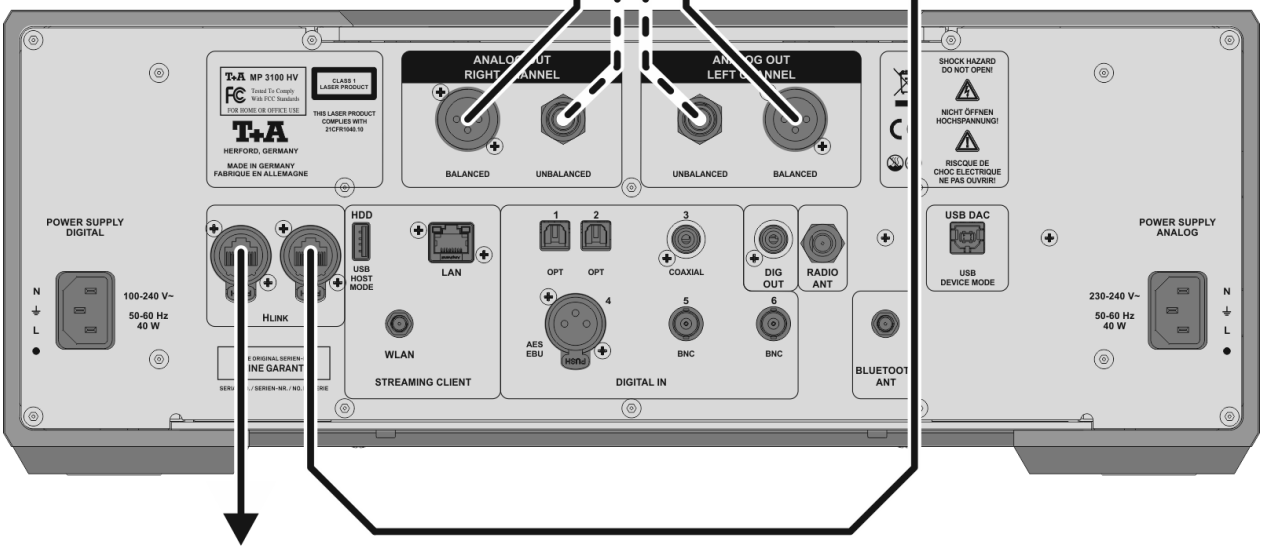

HLink Verbindung zum nächsten Gerät /
H-Link Connection to a further device

*****1 If both types of connection are present on the amplifier , we recommend the symmetrical option

Wiring diagram unsymmetric (Cinch / RCA)

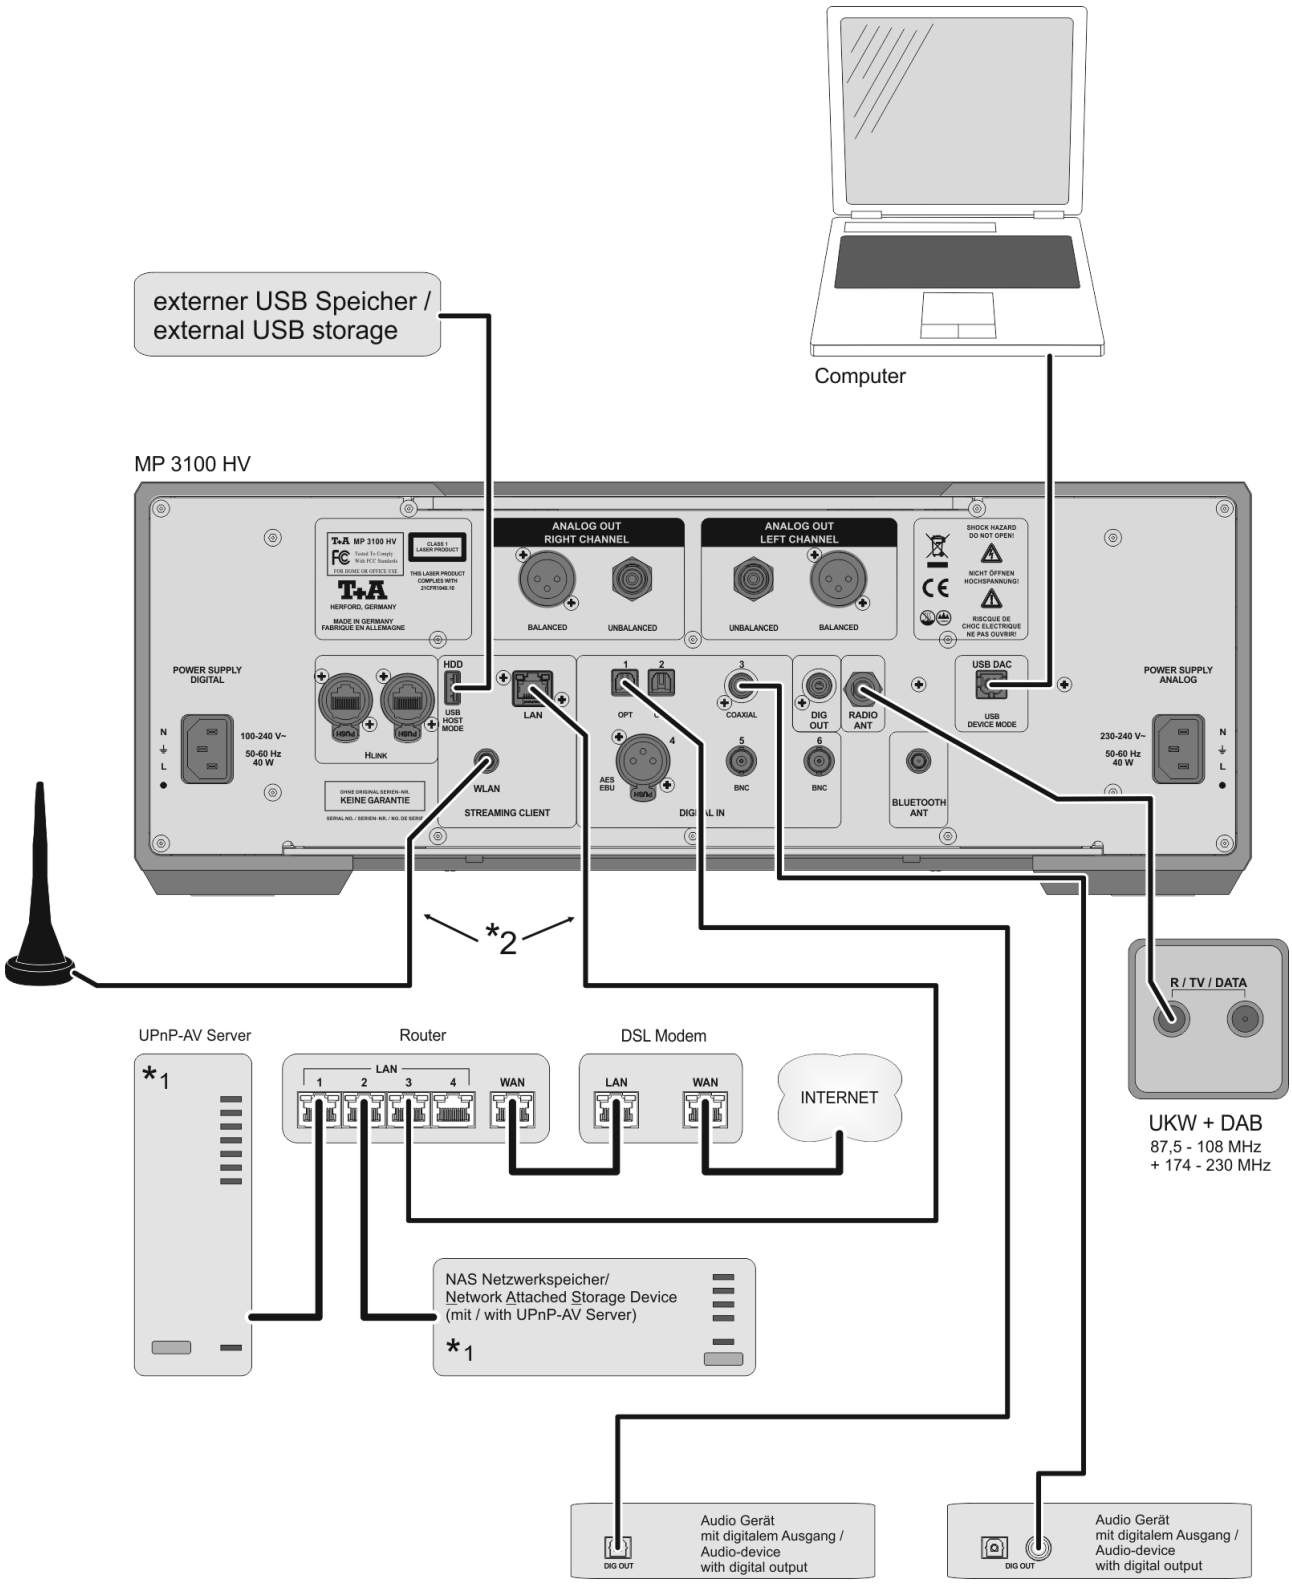


Attention!


A properly set up home network with router must be installed and in operation to use the **MP 3100 HV**.
For the use of internet radio a DSL access to the internet is needed.
For questions regarding setting up your network and internet connection please ask your system administrator or any network specialist.

*****1 Music Server with UPnP-AV server software installed
*****2 Connection either via Cable-LAN or Wireless-LAN

Wiring diagram Bluetooth / WLAN

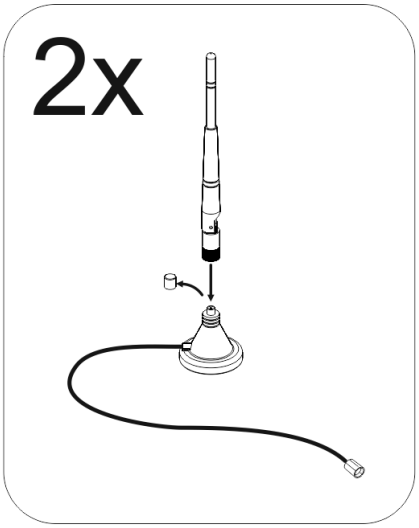


MP 3100 HV

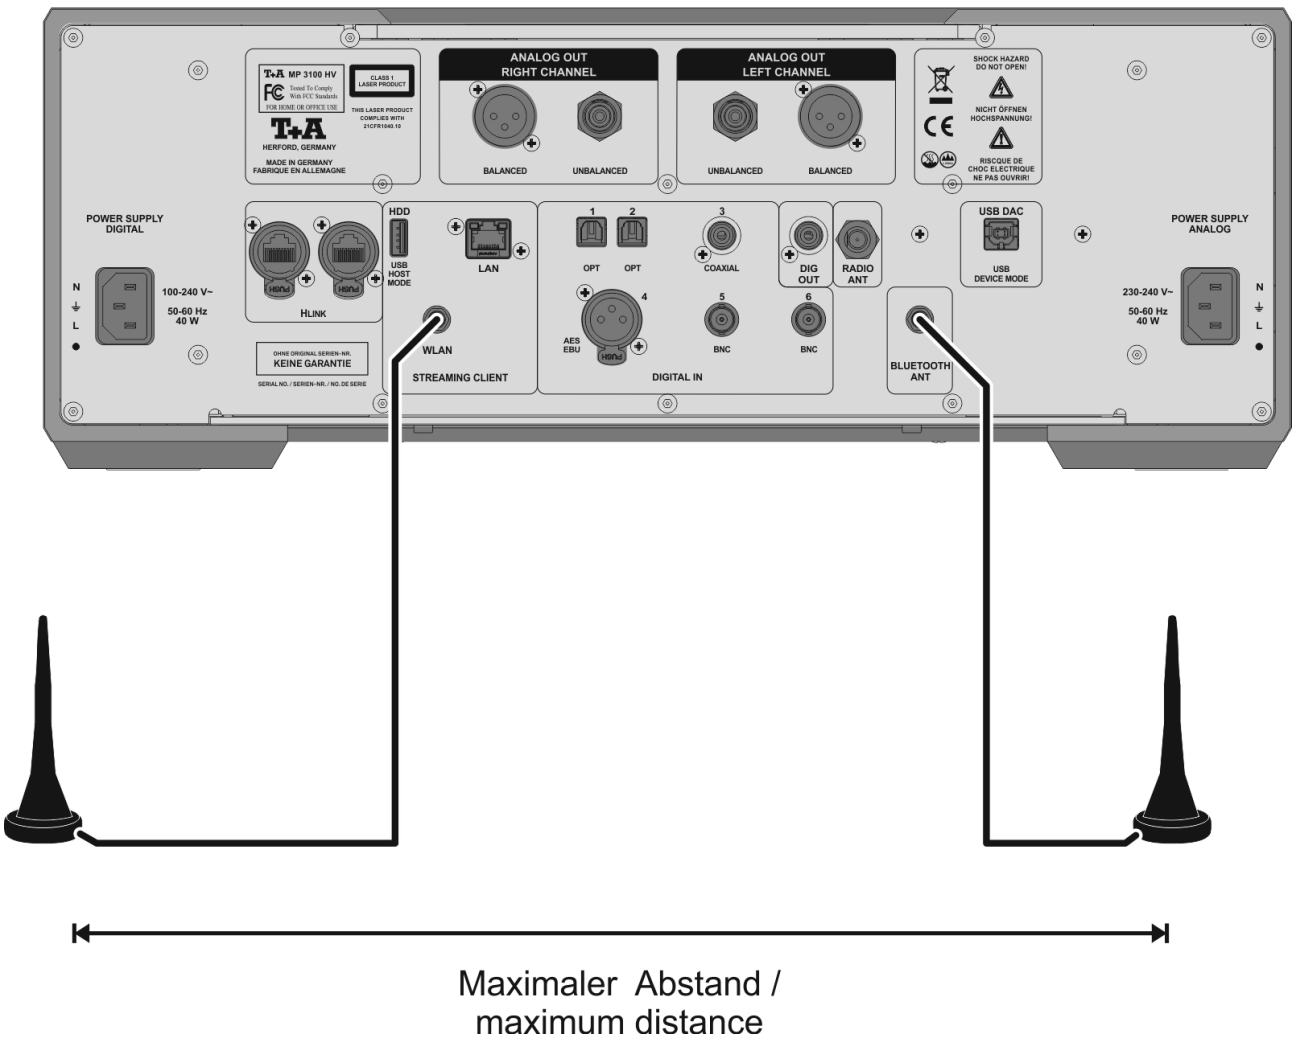



Maximaler Abstand /
maximum distance


Wiring diagram antenna connection

Note!
Please note that the digital radio DAB+ and the analogue FM radio transmitting in different frequency ranges. Depending on the existing antenna configuration, it may therefore be necessary to combine the two ranges with a DAB+/UKW feed-in crossover. When using an indoor antenna, do not place it in close proximity to sources of interference such as cordless telephones, WLAN routers or LED lights.

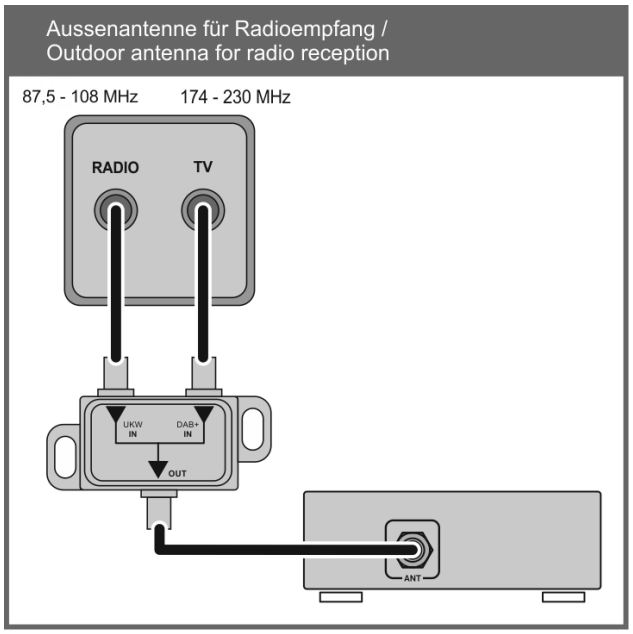

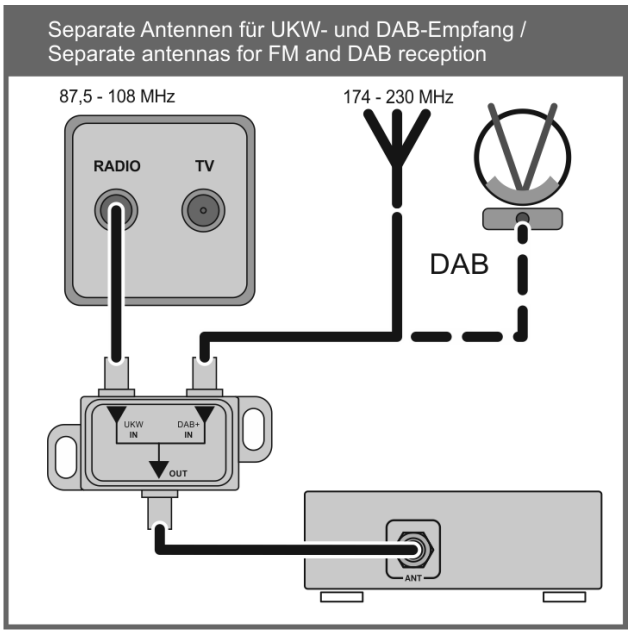

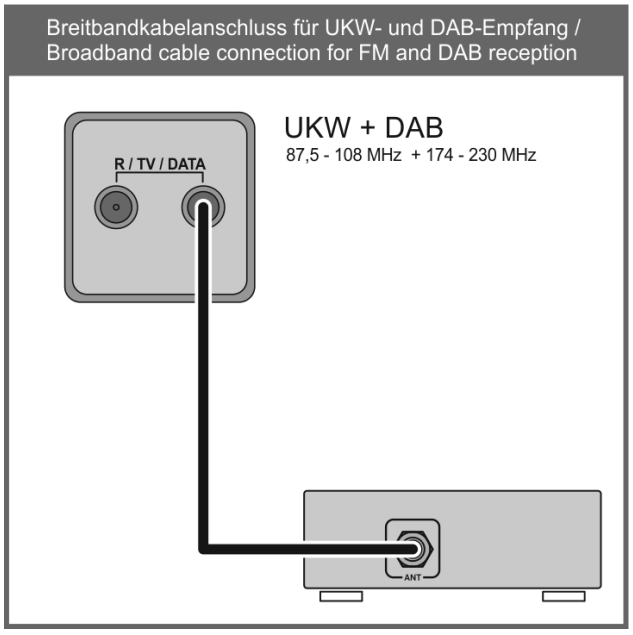

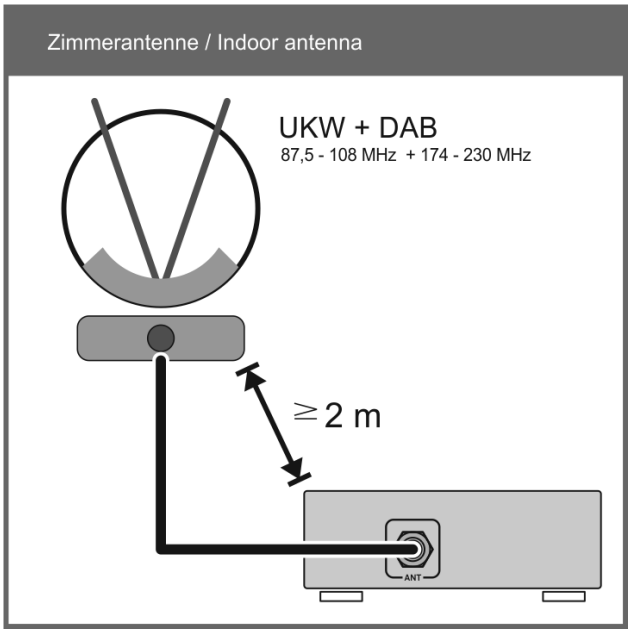

Appendix B

Specification

Disc mechanism	High precision linear tracking drive Double-Lasersystem: SACD: 658 nm, CD: 790 nm
Formats	SACD Stereo, CD, CD-R, CD-RW, SACD/CD Text
Frequency response and dynamic	SACD: 2 Hz - 44 kHz / 110 dB, CD: 2 Hz - 20 kHz / 100 dB

Streaming Client	
Formats	MP3, AAC, OGG Vorbis, FLAC, WAV, AIFF, ALAC / UPnP AV, M4A (AAC/ALAC), DFF, DSF
Data rates	PCM 32...384 kHz,16/24 Bit; MP3 bis 320 kBit, constant and variable data rate DSD64, DSD128, DSD256
Services	airable radio und podcasts, Tidal, Qobuz, Deezer, Amazon Music HD, highresaudio, Tidal connect, Spotify connect, Apple AirPlay2, Plays with Audirvana, Roon
Features	Gapless Playback for MP3 (Lame), WAV, FLAC, T+A Music Navigator App für iOS und Android
Network	LAN: Gigabit Ethernet WLAN: IEEE 802.11a/b/g/n/ac/ax 2x2 MIMO 2.412 – 2.472 GHz (2.4GHz ISM Band, 13 Channels) Channel 1 – Channel 13 North America FCC, Japan MIC, Europe ETSI 20MHz bandwidth 5.180-5.825 GHz (5GHz UNII-1/2/3 Band, 24 Channels) North America (IC and FCC): 5.180-5.600 GHz, 5.650-5.825 GHz Europe, Japan (ETSI and MIC): 5.180-5.700 GHz • max gain in 2.4GHz band: 3.2dBi • max gain in 5 GHz band: 4.25dBi up to 17dBm (at antenna terminal)

Tuner	
Internet Radio	
FM, FM-HD	87,5 - 108 MHz; sensitivity 1 µV; S/N > 65 dBA
DAB, DAB+	168 -240 MHz (Band III); Sensitivity 2,0 µV, S/N > 96 dBA
Features	RDS/RDBS, Stationname (PS), Programm type (PTY), Radiotext (Rt)

Bluetooth	
Bluetooth standards	Bluetooth standard BT 4.2
Profiles	A2DP 1.2 (Advanced Audio Distribution Profile), AVRCP 1.5 (Audio Video Remote Control Profile) / aptX ® HD, MP3, SBC, AAC.
Frequency band	2,4 GHz
Max. transmit power	+4dBm (2,5 mW)

Connections	
Analogue outputs	
asymmetric co-axial (RCA)	2,5 V_{eff} / 50 Ohm
symmetric (XLR)	5,0 V_{eff} / 50 Ohm
Output digital	1x co-ax, IEC 60958 (LPCM)
Digital inputs	1x AES-EBU 192 kSps /24 bit 5x S/P-DIF: 1x standard coax, 2 high quality BNC 192 kSps/24 bit and 2 optical TOS-Link 96 kSps /24 bit. 1x USB: Device-Mode up to. 384 kSps (PCM) and DSD512*, supports

	asynchronous data transfer. * DSD256 and DSD512 only with a Windows PC with appropriate driver installed or with a Linux PC with Kernel version 4.4 or higher (device version 2.1).

D/A-Converter	
PCM	Double-Differential-Quadruple-Converter with 4 D/A converters per channel, 32-Bit Sigma Delta, 352,8 kSps / 384 kSps.
DSD	T+A True-1Bit DSD D/A-Converter native bitstream
Upsampling (PCM)	Programmable Digital Signal Processor with 4 selectable oversampling algorithms: FIR short, FIR long, Bezier/IIR, Bezier
Analogue filter	Phase-linear Bessel filter 3rd order, switchable 60 kHz or 120 kHz
Frequency response	PCM 44.1 kSps: 2 Hz - 20 kHz PCM 48 kSps: 2 Hz - 22 kHz DSD 64: 2 Hz - 44 kHz PCM 96 kSps: 2 Hz - 40 kHz DSD 128: 2 Hz - 60 kHz PCM 192 kSps: 2 Hz - 80 kHz DSD 256: 2 Hz - 80 kHz PCM 384 kSps: 2 Hz - 100 kHz DSD 512: 2 Hz - 100 kHz
Total harm. distortion	< 0.001 %
Signal : noise ratio, A-weighted:	116 dB
Channel separation	110 dB

Power requirement	
230 V version	1x 220 - 240 V~ and 1x 100 - 240 V~ , 50-60 Hz
115 V version	1x 110 - 115 V~ and 1x 100 - 240 V~ , 50-60 Hz
Power consumption	max. 2x 40 W Standby < 0,5 W

Dimensions and weight	
H x W x D [cm]	17 x 46 x 46 26 kg

Accessory	
	Infrared remote control handset F3100, W-LAN aerial, Bluetooth aerial, RCA cable, BNC to RCA adaptor, 2x power cord

We reserve the right to alter specifications.

T+A elektroakustik GmbH & Co. KG
Planckstraße 9 – 11
D - 32052 Herford

T +49 (0) 5221 / 7676-0
F +49 (0) 5221 / 7676-76

info@ta-hifi.com
www.ta-hifi.com