OWNER'S MANUAL

ST200 SIGNATURE

STREAMER

ATOLL ELECTRONIQUE

You have just purchased a product with exceptional audiophile performance. Your trust in our brand is highly appreciated. To get the most out of your streamer, make sure to read this manual carefully.



INDEX

1.– General information..... *p.3*
2.– Connections..... *p.4*
3.– ATOLL remote control..... *p.5*
4.– Connecting setup..... *p.6*
5.– Preamp. / BY-PASS functions..... *p.7*
6.– Uses..... *p.7*
Getting started..... *p.7*
Playlists..... *p.10*
Playqueue..... *p.10*
Internet radio..... *p.10*
Front and rear USB..... *p.10*
Media server..... *p.11*
Streaming services..... *p.11*
Roon and Audirvana..... *p.11*
Bluetooth®..... *p.11*
7.– Troubleshooting table..... *p.12*



SAFETY INSTRUCTIONS

- Do not make any connections when your device is turned on.
- Install your appliance in a dry, well-ventilated place away from any source of heat.
- Do not put anything on your Streamer.
- Avoid any short circuits.



USER ADVICES

- Your device will offer you optimal listening quality approximately half an hour after it is powered on, until the audio stages reach their ideal operating temperature. Between two uses, it is therefore desirable to use the SLEEP position. At night or when you leave your home it is best to use the main switch to turn off the device.
- It is recommended to choose good quality cords to connect this appliance to the other devices. Feel free to take advice from your specialist dealer.



YOU WILL FIND ENCLOSED

– A ST200 Signature Streamer.
– A power lead.
– A RCA cord.
– A remote control (with 2 Lithium batteries CR2032).
– Two antennas.
– This manual with the warranty certificate.

Latest update: 22nd April 2025

1.- GENERAL INFORMATION

GENERAL INFORMATION AND ADVICES

Your ATOLL Streamer is DLNA and UPnP compatible, allowing it to work in a network with other devices. Take the time to carefully read the getting started section of this user guide before turning on your device.



To use your device as easily as possible, download the ATOLL Signature (2) App from the Apple Store or the Google Play store.

ACCEPTED FORMATS

MQA(*), DSD, LPCM, FLAC, ALAC, AIFF, WMA, OGG, WAV, AAC, MP3.
Supported resolutions: PCM up to 24 bits/192 kHz, DSD64 and DSD128.

(*) The ST200 includes the MQA Core Decoder, which decodes the MQA file once to deliver higher than CD quality. The first deployment retrieves all direct music information. The output is at the sampling frequency of 88.2 kHz or 96 kHz.
"MQA" or "MQA Studio" indicates that the product decodes and plays an MQA stream or file, and specifies provenance to ensure that the sound is identical to that of the source material. "MQA Studio" indicates that it is playing an MQA Studio file, which has either been approved in the studio by the artist/producer or verified by the copyright owner.
MQA and Sound Wave Device are registered trademarks of MQA Limited © 2016.

CLEANING

Before any cleaning, switch off your appliance. Use a soft and dry rag to clean up the appliance. Never use acetone, white-spirit, ammoniac, or any kind of product containing abrasive agents. Never try to clean up inside the appliance.

WARRANTY CONDITIONS


The guarantee is **two years** period from the date of purchase. We recommend you ask your dealer to fill the guarantee and to conserve it with your invoice. **The guarantee is only available for the appliance which has been used correctly regarding this owner's manual.**



TECHNICAL DATA

Power supply:	30 + 10 VA
Audio outputs:	1 Stereo line output 2 Digital outputs: 1 Coaxial, 1 Optical Toslink
Audio inputs:	2 Stereo line inputs 4 Digital inputs: 2 Coaxial, 2 Optical Toslink 1 Bluetooth® 2 USB-A inputs:1 front, 1 rear
Output stages:	2 Discrete stages with no feedback
Total of capacitors:	27 000 µF
Dynamic:	129 dB
Switch OFF consumption:	0 W
SLEEP power consumption (preheating):	11 W
ON consumption:	17 W
Output impedance:	22 Ω
Maximum input level:	3,5 Vrms
Output level:	2,6 Vrms
Signal/Noise ratio:	129 dB
Distortion at 1 kHz:	0,0004%
Bandwidth:	5 Hz - 20 kHz
Rising time:	1,5 µs
Digital/analogue converter:	Burr-Brown PCM1792 24 bits/192 kHz
Dimensions:	440×284×95 mm
Weight:	6 Kg

2.- CONNECTIONS

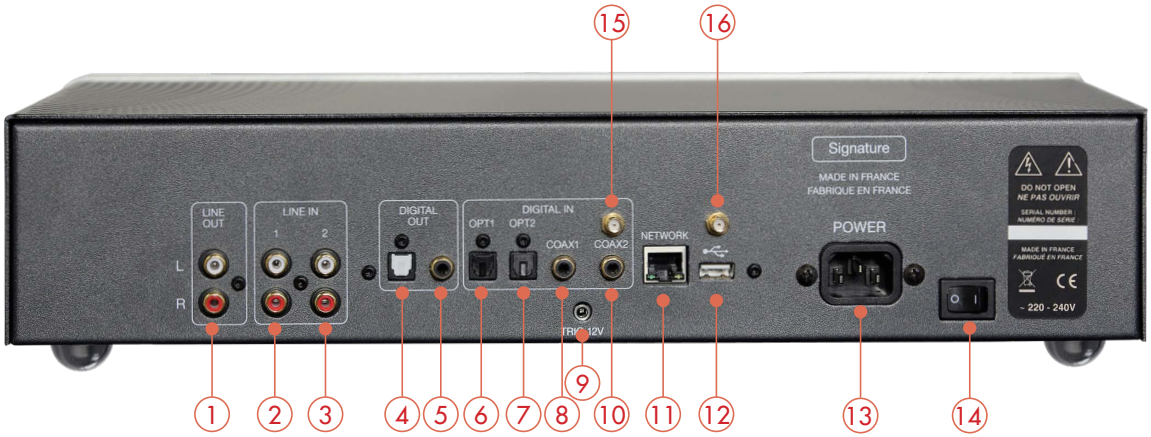

1) Analog stereo output.
2) Input Analog 1[(1)].
3) Input Analog 2[(1)].
4) Optical output.
5) Coaxial output.
6) Optical 1 input.
7) Optical 2 input.
8) Coaxial 1 input.
9) Trigger output[(2)].
10) Coaxial 2 input.
11) Ethernet input (RJ45).
12) USB input (A type).
13) Power input.
14) ON/SLEEP switch.
15) WIFI connection antenna.
16) Bluetooth® connection antenna.

[(1)] These inputs can be configured in BY-PASS, see chapter 5, page 7.

[(2)] Trigger output: this output is used to control the switching ON/SLEEP on of any device equipped with a compatible Trigger input (see instructions for use).



17) Menus control keys.
18) USB A type Input.
19) Display.
a) BY-PASS led indicator.
20) Headphones output (jack Ø 3,5 mm)[(3)].
21) Volumen control down and up ⊕ & ⊖.
22) ON/SLEEP key & SLEEP led indicator.

[(3)] To avoid electrostatic shock, we recommend connecting the headset when the device is switched ON/SLEEP. While using headphones, turn off the amplifier.

CONNECTING WIFI AND BLUETOOTH® ANTENNAS




You will find the antennas in the bag of the remote control.
Make sure that the WIFI and Bluetooth® antennas are correctly installed before any connection and use.
Please use the 2 supplied antennas (identical) or an antenna with male connector.

3.- ATOLL REMOTE CONTROL

REMOTE CONTROL FUNCTIONS

The remote control uses 2 lithium CR2032 (3V) batteries. Make sure to place ⊕ upside.

Warning: some keys may have different uses depending on the menus or context.

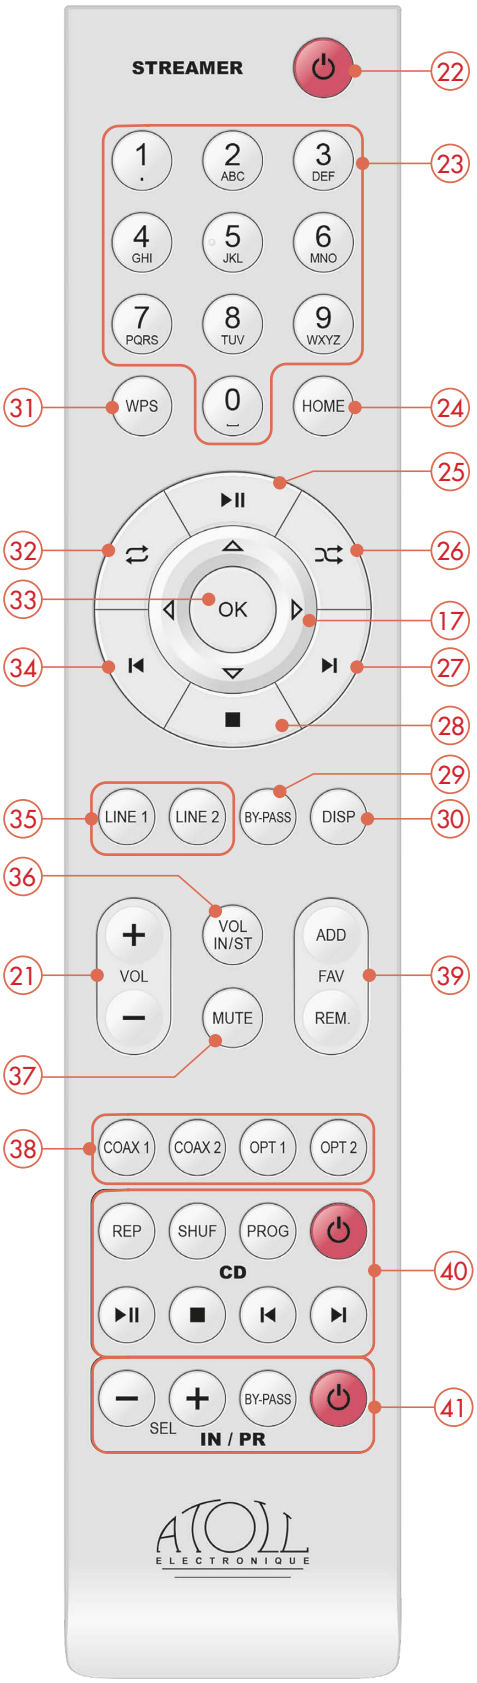

Keys already available from the front panel:

17) Menus control keys.

21) Volume control ⊕ & ⊖. These keys can be assigned to the Streamer or the ATOLL amplifier (IN and PR "SE" and "Signature").

22) ON / SLEEP (PREHEATING) BUTTON: (2 modes: see previous chapter).

23) ALPHANUMERIC KEYS (from 0 to 9 and from A to Z). *By quick press on key (2) i.e. select a, b, c, 2, A, B, C*

24) HOME: allows to return to the main menu.

25) PLAY/PAUSE.

26) SHUFFLE: button allowing random playback.

27) Access to the next track.

28) STOP

29) BY-PASS: (press during 5 seconds).

30) DISP: key to manage the intensity of the display.

31) WPS: button allowing quick WIFI connection: press this button and that of your box simultaneously to establish the connection.

32) REPEAT: repeat either the track (symbol with 1) or the album.

33) OK: validation key in menu choices.

34) Access to the start of the track or to the previous track by double pressing. *In input menus: deletion of the last character.*

35) Input selection keys: Line 1, Line 2.

36) IN/ST volume button (press during 3 seconds to change). Allows you to assign the Volume (21) and Mute (37) keys to either the Streamer or the ATOLL amplifier (IN and PR "SE" and "Signature").

37) MUTE: Mute button. This button can be assigned to the ST or the ATOLL amplifier (IN and PR "SE" and "Signature") by pressing and holding the VOL IN/ST button.

38) Input selection keys: Coaxial 1, Coaxial 2, Optical 1, Optical 2.

39) FAVORITE: add (ADD) or remove (REM) from a radio station.

40) CD keys: keys to control CD and Drive ATOLL players.

41) IN/PR keys: keys allowing you to control the ATOLL integrateds and preamps.

4.- CONNECTING SETUP

SOURCE MODE (BY-PASS) OR PREAMPLIFIER

This device can be used as a source or a preamplifier.
To activate/deactivate BY-PASS mode, press and hold the BY-PASS button on the remote control for 5 seconds or simultaneously press and hold the Vol ⊕ and Vol ⊖ buttons on the front panel of your device for 3 seconds.
The diagrams below show the wiring options for these different applications.

ST200 SIGNATURE

Source



Using ST200 Signature as a source directly linked to an Integrated or preamp. **BY-PASS mode should be active and the BY-PASS led (16) switch on.**



Integrated IN200 type

NB.: You can switch on every line IN of the integrated.

Preamp



Using the Streamer as a preamplifier directly connected to a power amplifier (or active speakers). **BY-PASS mode should be not active and BY-PASS led (16) off.**



Power amplifier

Subwoofer




TRIGGER LINK

This appliance is equipped with a Trigger that allows the switch ON/SLEEP of any amplifier equipped with the same kind of Trigger inputs (ATOLL amplifier).

Appliances must be linked as shown below:

An ST200 Sig streamer type



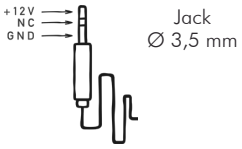

Power amplifier



When the system is operating, the ON/SLEEP switch of your power amplifier must remain in position SLEEP (position (0)). If the switch is in the ON position (I), the amplifier will work but not the Trigger function.

Trigger cable must be a stereo Male to Male jack plug Ø 3,5 mm (1/8").

Therefore, each time the Streamer comes out of SLEEP, the amplifier will switch on. It will also turn off each time it is put on SLEEP.

5.- PREAMP. / BY-PASS FUNCTIONS

VOLUME:
The volume is managed using the buttons (21) of the front panel or the remote control.
The volume level is displayed for a few seconds on the screen, and it always remains indicated at the top of the display.

On start-up, the volume is still the one that remained previously.

Volume at zero corresponds to a complete "MUTE" of the device with switching of the output relay.

SOURCES:
Your appliance has 6 inputs (unless USB, media server, Bluetooth®):

Line 1 / Line 2 / Coaxial 1 / Coaxial 2 / Optical 1 / Optical 2

These sources can be renamed from the ATOLL Signature (2) application: Settings / Rename local inputs.
NB.: The selected source is always followed on the display by a symbol *.

CONFIGURING A LINE INPUT IN BY-PASS:
Particular case: BY-PASS assignment of an input for connection to a home cinema system.
Configuring an input to BY-PASS is possible on Analog inputs 1 and 2.
In this case, the volume management function is inoperative on the selected input.
To switch to this mode: select Analog input 1 or 2 then hold the BY-PASS button (29) on the remote control for 3 seconds. When the BY-PASS is active, the led (a) is on. When an input is selected in BY-PASS mode, it will remain memorized in this mode even if the source is changed or the power is turned off.
To deactivate this mode, press the BY-PASS button on the remote control for 3 seconds.

6.- USES

GETTING STARTED

Before switching on your appliance, connect the network cable (RJ45) to input (11). For much better results and best performances, we highly recommend to uses a wired connection.

Wait for the start-up screen to appear before any manipulation.

You can use the buttons of navigation (17) of the remote control or the front panel to select the different menus. On the first connection (or changes in the network configurations) you will have to check the network settings of your appliance. If this setup is not perfectly settled, some of the functions of the streamer (internet radios or reading music of your server) will not be operated.

Available menus:

- Playlists.
- Internet radio.
- USB.
- Media Server.
- Qobuz.
- Tidal.
- Deezer.
- Amazon Music
- HighResAudio.
- Spotify.
- Bluetooth.
- Line 1 and 2.
- Coaxial 1 and 2.
- Optical 1 and 2.
- Settings.



Connecting an RJ45 cable automatically launched the network link. If this is done correctly (not blinking), your network is correctly configured. The following paragraph is optional in your case.

For more information, you can watch a video dedicated specifically to the installation of ATOLL network and "all-in-one" players.

For more information, you can watch a video dedicated specifically to the ATOLL Signature 2 application.

NETWORK CONFIGURATION:

Wired: In the case of a wired connection, the association is done automatically after a few seconds. The symbol indicates that the wired connection is established.
Your device is then ready to operate.

Wireless: When you first plug in your device (or if you change network configurations), you must configure the connection between your Streamer and your network. Without this configuration, the operation of internet radios and the playback of files present on your network will be ineffective.

- Go to the **"Settings / Network configuration / Network type"** menu.
- You will need to choose the type of network:

"Automatic", "Wired" or "Wireless".

– **Automatic:** Connecting an RJ45 cable automatically launches the network connection. This menu allows you to choose the network connection by prioritizing the wired connection, that is to say that when the device is wired, the connection will automatically switch to wired. When no cable is connected, then the connection switches to WIFI.

– **Wired:** You can switch to automatic mode (DHCP) or enter a static IP address.

– **Wireless:** In the case of a "wireless" connection, the device will allow you to find available wireless networks. We advise you to use WPS to associate your device with your internet box (if available on it). First activate WPS on your box, then press the WPS button (30) on the remote control, or from the menu:

"Settings / Network configuration / Wireless configuration / WPS PBC".

The screen displays **"WPS in progress"** and then, when the connection is established, it displays **"Connected"**.
If WPS is not possible, press **"Scan"**. All wireless networks available in your environment will be displayed. Select the one corresponding to yours.
Enter, respecting capital letters and without spaces, the WIFI security key which appears below your internet box.
Validate your password by pressing the "OK" key.

This symbol indicates that the wireless connection is established.

Configuration using the ATOLL Signature (2) and Softap application

- Download the ATOLL Signature (2) application on your smartphone or tablet, do not try to open this application yet.
- Power on your network drive.
- From the "Settings" menu of your smartphone, connect to the "Softap" WIFI network (this network appears a few minutes after turning on your network player).
- Launch the ATOLL Signature (2) app.
- In the "Settings" menu click on **"Network configuration / Wireless configuration / Scan"**, select your internet box then enter the WIFI password.
- Reconnect your smartphone to the WIFI network of your internet box.

This symbol indicates that the Softap is available (temporary local network generated by the Streamer).

NETWORK INFO:
In this menu, you'll find all information about the network: type of network, IP address, Mask, Gateway, DNS…

LANGUAGES:
This menu allows you to select the language of all menus. You can choose between: **English, German, Spanish, French, Italian, Nederland, Polish, Portuguese, Russian.**

RETURN TO PLAY-SCREEN TIME:
This menu concerns the home screen of your device. It allows you to manage the value of the time to return to the display of the source currently playing, when you navigate further through the menus.

MANAGE AUXILIARY INPUTS:
This menu allows you to rename the auxiliary inputs, to allow the user to identify their different inputs. It also allows you to check/uncheck the entry of your choice so that it is displayed/hidden in the main menu of the navigation bar.

VERSION:
This menu displays the software version that equips your machine.

FIRMWARE UPDATE:
The update can be done directly over the network. Select “Check for update”. If an update is available, it will be done automatically. Leave the device plugged in without using it until restarting. This operation may take several minutes. If no updates are available, the device will display “No updates available”.

POWER MANAGEMENT:
Allows the user to choose the time after which automatic SLEEP starts:

– SLEEP timeout: When the device is not playing or when no source is selected: choice between 5, 10, 15 or 30 minutes before SLEEP.
– Maximum idle play time in hours: When the device is playing: choose between 4, 8 or 12 hours before SLEEP.
– Display intensity: This menu allows you to choose the light intensity of the display. If you choose “off” mode the display will turn off after a few seconds. Each press of a button on the remote control or the front panel temporarily reactivates the display. You can also choose this function directly with the DISP button (30) on the remote control.

FACTORY RESET:
Allows you to find all the original settings. Resetting the settings will restart your device. Note that the device will restart with an English display.

STREAMING AUDIO QUALITY:
This menu allows you to choose the quality of files in 24 bits/192 kHz or 24 bits/96 kHz.
In the event of limited internet speeds, favor 24 bits/96 kHz quality in order to preserve bandwidth.

VOLUME OF THE DIGITAL OUTPUT:
Configures variable or fixed the digital output signal depending on the volume; this makes it possible or not to adjust the volume when using an external DAC.
This function should not be activated if you use the analog outputs.

DEVICE ID:
This menu allows you to name the device to be visible from devices such as Roon.

BALANCE:
Allows you to adjust the left-right balance: using the volume keys ⊖ and ⊕. This balance remains stored.

ATOLL Signature 2 APPLICATION:
A new free application for smartphones and tablets is available to control your Streamer. It can be found on the Apple Store (iOS) or Google Store (Android) download sites under the name ATOLL Signature 2.



First, make sure that your Smartphone is connected via WIFI to the same network as your Streamer. In this case, your device appears on the screen of your Smartphone just after starting the application, simply select it.

The application uses the data displayed on the screen: radio station logo, audio stream, volume, etc. You can navigate the menus and adjust the analog volume level. It is possible to exit the standard SLEEP mode from the application: play a song or a radio, the device exits the SLEEP mode automatically.

These applications undergo regular updates, their operation and their possibilities are therefore likely to evolve over time.

N.B: Note that the old ATOLL Signature application is still available for download.

SEARCH FUNCTION:
You can access the search bar, which is always available to the user. In addition, we have implemented an intuitive search, to easily find radio stations and podcasts, artists, albums, playlists, among others. You can also find the latest search results in memory, and clear the entire search result, or a specific search.

CONTROL FROM A COMPUTER:
It is possible to control your streamer from a computer screen by typing in the search bar of your internet browser the IP address of your streamer followed by /webclient:

192.168.xxx.xxx/webclient

The IP address of your streamer is available in the "Settings / Network info" menu.
It is also possible to rename your streamer by typing only the IP address of the latter in the search bar of your internet browser.

PLAYLISTS

Each song played on the network can be put in the different playlists. With the application, you can rename it, delete it, shuffle it or repeat it…

1.- Global playlist: This device allows you to create playlists with songs present on your network (USB inputs, Media Library). Note that songs from streaming services cannot be added to these playlists.

2.- Local playlist: For each streaming service you can create specific playlists. These playlists will remain associated with the corresponding streaming service.

PLAYQUEUE

This temporary playlist allows you to place songs one after the other. The location of each song can be changed by going to the queue. Select a track from the ATOLL Signature 2 app, and swipe to move it. The songs in this list disappear when the device is disconnected from the mains.

INTERNET RADIO

This menu allows to access for free to about 100,000 radio stations and also to podcasts.

"Favorites" menu: This menu allows you to make a selection of favorite radio stations which will be easily accessible. When you are on a station, you can add it with the application button ♡ .To remove a radio from your favorites, press again ♡. These functions are also possible with the ADD FAV and REM FAV buttons (39) on the remote control.

Different selection criteria: Favorites / Usage history / Recommendations / Local radios / Popular stations / Trends / High quality / New stations / Filter / Personalized radio. If you want to select a radio by location, by genre or by genre, select "Filter".

Personalized radio: Allows you to add a radio of your choice using its URL. You will find the radios recorded in this way in this menu.

Suggest content: Allows you to submit a new radio station to the Airable platform (free service).

Podcasts: This menu allows a selection of podcasts according to different criteria: Favorites / Usage history / Popular podcasts / Trends / Filters.

FRONT & REAR USB

Select one of those inputs to read all music files from a USB key or Hard Disk.
Readable files system can be FAT32, NTFS, EXT 2/3/4.

MEDIA SERVER

All files on the network can be accessed through this menu. By selecting this menu, a list of different data sources appears (such as NAS, computer, or router). You can choose from music, photos, and videos in each of them.

Only music files are supported by this device.

Music: You can select music files depending on several criteria : (note that this is depending on the information placed on the original files). Selection can be done: Files / All music / Playlist / Album / Artist / Genre / Composer. Placing tracks in "Playlists" is always possible while pressing icon.

STREAMING SERVICES

Spotify Connect

You can access Spotify from ATOLL Signature App: Use your phone, tablet, or computer as a remote control for Spotify. Go to www.spotify.com/connect to learn how.
The Spotify Software is subject to third party licenses and you can find it here:

https://www.spotify.com/connect/third-party-license

Tidal Connect

You can directly stream from Tidal App to your ATOLL Streamer, by selecting your device in the menu:

Qobuz / Tidal / Deezer / HRA

You also have direct access from the app to those streaming services.
During the first use, you will need to enter your username and password.
For Tidal use the ATOLL Signature App.
Press on Username, fill it, and validate by pressing OK.
Press on Password, fill it, and validate by pressing OK. Finally press on "Log in".

Once your account is valid, you'll be able to get access to all services related to your account:

– Playlists that could be created.
– Favorites (albums, tracks, artists).
– Purchases (by albums or tracks).

ROON & AUDIRVANA

Your network player is 100% compatible with these gateways. Before connecting to Roon for the first time, you will need to fill in the "Settings: Device ID" field with the reference of your device between: ST200, ST300, MS120, SDA200, and SDA300.

BLUETOOTH®

Your device allows the reception of audio signals sent from any device with a Bluetooth® transmitter (smartphone, tablet, computer, etc.).

First pairing: Select the Bluetooth® input of the ST200 Sig either via the application, the front panel or the buttons on the remote control. Choose "Visible to other devices," then "Search for other Bluetooth® devices." Activate Bluetooth® connectivity on your transmitting device (smartphone, tablet, computer, etc.), then select your streamer from the list of connected devices. A list of connected devices will appear on the ST200 Sig screen. Select your device, then "Pair". Once paired, return to your streamer's Bluetooth® menu, and select your paired device from the list then press "Play". You can also disconnect or unpair each device. Your transmitter will remain associated until the ST200 Sig is turned off, but it will remain visible to your transmitter.

Pair another transmitter: Before connecting a new device, disconnect the previous one. Connect the new device to Bluetooth® and then return to the streamer's Bluetooth® menu.
The signal reception quality may depend on the power of the Bluetooth® transmitter on your device and the distance between the two devices. To ensure correct reception without interruption, avoid being more than 5 meters away from your device.

7.- TROUBLESHOOTING TABLE

Problem encountered	Possible Solutions
No sound.	– Check your RCA connections. – Have you selected the correct source? – The volume might be at zero level.
Impossible to access the Network.	– Enter the WAP key again. – Make sure that the antenna is the supplied template (male connector) and that it is well screwed on its base.
No recognition of the USB stick.	– Check if the format is compatible.
Frequent loss of the WIFI network.	– Make sure your box and your Streamer are not confined or too far apart. – Choose a wired connection or with Powerline adapters for example.
The device stops responding.	– Press 2 times on key HOME (24). – Turn off the power switch level before restarting.



WARRANTY FORM ~ ST200 Sig

to present to your dealer and to join with your purchase invoice when sending back the appliance to the service center or the address below:

ATOLL ELECTRONIQUE®
Bd des Merisiers
50370 BRECEY
FRANCE

WARRANTY CONDITIONS

This device was made to give you complete satisfaction.
*ATOLL electronics warranty is **two years** from the date of purchase of the equipment, date, and stamp of the seller being authentic. We recommend you keep your proof of purchase (invoice) with this coupon properly filled.*

The warranty, as well as the terms of service, should be specified at the time of purchase by your dealer who will advise you, in case of faulty behavior or failure.

This warranty covers labor and replacement of parts acknowledged to be faulty and not their normal wear and tear caused. Devices with traces of disassembly, drop, immersion, or abnormal voltage or any cause of degradation in the appliance and damage resulting from use contrary to the indications included in the operating instructions, automatically lose the benefit of the guarantee.

Date of purchase:

Place of purchase:

Buyer signature:

Dealer's Stamp

ATOLL ELECTRONIQUE®
is a French Company that designs, manufactures, and commercializes all its products.

MADE IN FRANCE